

# ***Mamibot***

## **Cordless Vacuum Cleaner**



**EN**

**User Manual**

**202306 Ver.**

# Table of Contents

<b>2-3</b>	<b>Safety Instructions</b>
<b>4</b>	<b>V6 Pro Description</b>
<b>5</b>	<b>V6 Pro Specification</b>
<b>6-7</b>	<b>What's in the package</b>
<b>8</b>	<b>Assembling &amp; Disassembling</b>
<b>8-9</b>	<b>Charging</b>
<b>9</b>	<b>Switch On/Off</b>
<b>9</b>	<b>Storage</b>
<b>10</b>	<b>Maintenance and Clean</b>
<b>10</b>	<b>Empty the Dust Box</b>
<b>10-11</b>	<b>Roller Brush Cleaning</b>
<b>11-12</b>	<b>Filter Set Cleaning</b>
<b>12</b>	<b>Cleaning/Replacement Frequency Recommended</b>
<b>13</b>	<b>Troubleshooting</b>
<b>14</b>	<b>Product Warranty</b>
<b>14</b>	<b>Correct Disposal &amp; Compliance Standards</b>

Please read all instructions before using this product, and keep it properly for future reference.

# Important Safety Instructions and Warnings

## Read all instructions before use:

The appliance is not to be used by children. Persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge may only use this appliance if they are supervised or have been given instruction about how to use it safely and understand what risks are involved. Children should be supervised to ensure they do not play with the device.

## Notice and Warnings:

- Please take it gently and carefully to avoid breaking the device.
- Please don't use it close to fire source or in any location of high temperature.
- Don't use or keep the cleaner in extreme climate conditions, e.g. cooling rooms, high temperature environment, suggested temperature of using and storage is 0-40 °C (32-104°F) of indoor areas;
- Please charge your cleaner at least every three months if you are not using it regularly.
- Check the adapter cable and confirm it is in good condition.
- Fully charge the cleaner before use if it's not used for long time.
- Please make sure the filter set is installed properly.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use vacuum if it has been dropped, damaged, left outdoors, or dropped in water. Return it to an authorized service center.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or got ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Look on your vacuum and follow all label and marking instructions.
- Keep end of hose, wands and other openings away from your face and body.
- Do not use the vacuum cleaner without dust box filter in place.
- Always unplug this appliance before connecting or disconnecting vacuum hose.
- Store the vacuum indoors. Put the vacuum away after to prevent tripping accidents.
- Use the incorrect battery will damage motor and users. Please use the original batteries.
- Use only on dry, indoor surfaces.
- Do not use for any purpose other than described in this user's guide.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use the cleaner in or near flammable or explosive conditions.
- Don't use your cleaner to suck glass particles, needle, water, ashes, or any other

liquids.


- Don't use your cleaner to suck cement, land plaster, wall plaster or toys, which may cause defects to the device.
  - Don't block your suction inlet or tube, clear the suction inlet and tube in time to retain good performance of cleaning and avoid motor defects.
  - If the cleaner can't start working even when the battery is full, please go to service agent or Mamibot distributors for inspection, don't disassemble it on your own.
  - Don't use the cleaner if dust box and filter set are not in position.
- 
- Dry cloth is suggested to clean the cleaner, no gas/alcohol or other chemical solution is allowed to clean the device.
  - Turn off the cleaner first before proceeding with any cleaning task or maintenance.
  - Please clean the dust box, suction inlet and tube in time to avoid air channel being blocked, air channel blockage would reduce suction power and cause motor heating.
  - Hepa filter is suggested to be replaced in three month, or even in shorter period if the device is frequently used.

### **Application of Power Adapter and Batteries**


- Use only the power adapter supplied with this device. Use of other type of power adapter will result in malfunction and/or danger.
- Please use the proper electric outlet and make sure no heavy objects are placed on the power adapter or power cord.
- Allow adequate ventilation around the adapter when using it to operate the device. Do not cover the power adapter with objects that will reduce cooling.
- Do not use the adapter in a high moisture environment. Never handle the adapter with wet hands.
- Connect the adapter to a proper power source. The voltage requirements are found on the adapter.
- Do not use broken adapter, power cord or plug. The plug must be removed from the receptacle before cleaning or maintaining the appliance. Do not unplug the power adapter by pulling on the power cord.
- Do not attempt to service the adapter. There are no service parts inside. Replace the whole unit if it is damaged or exposed to high moisture. Consult your Mamibot dealer for help and maintenance.
- The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contact, heat above 40°C (104°F), or incinerate.
- If you have to dispose of this old equipment, please take it to the local recycling center for recycling electrical and electronic parts.
- Retain the safety and operating instructions for future reference.
- Do not expose your device to rain or excess humidity, and keep it away from liquids (such as beverages, faucets, and so on).
- Avoid exposing your device to direct sunlight or intense light source, and keep it away from heat source (such as radiators, space heaters, stoves, and so on).
- On waxed floors the movement of the cleaner head may create an uneven lustre. If this happens, wipe with a damp cloth, polish the area with wax, and wait for it to dry.
- The appliance must be disconnected from the receptacle before removing the battery for disposal of the appliance.
- The appliance must be used in accordance with the directions in this Instruction manual.
- Product manufacturer cannot be held liable or responsible for any damages or injuries caused by improper use.



# V6 Pro Description

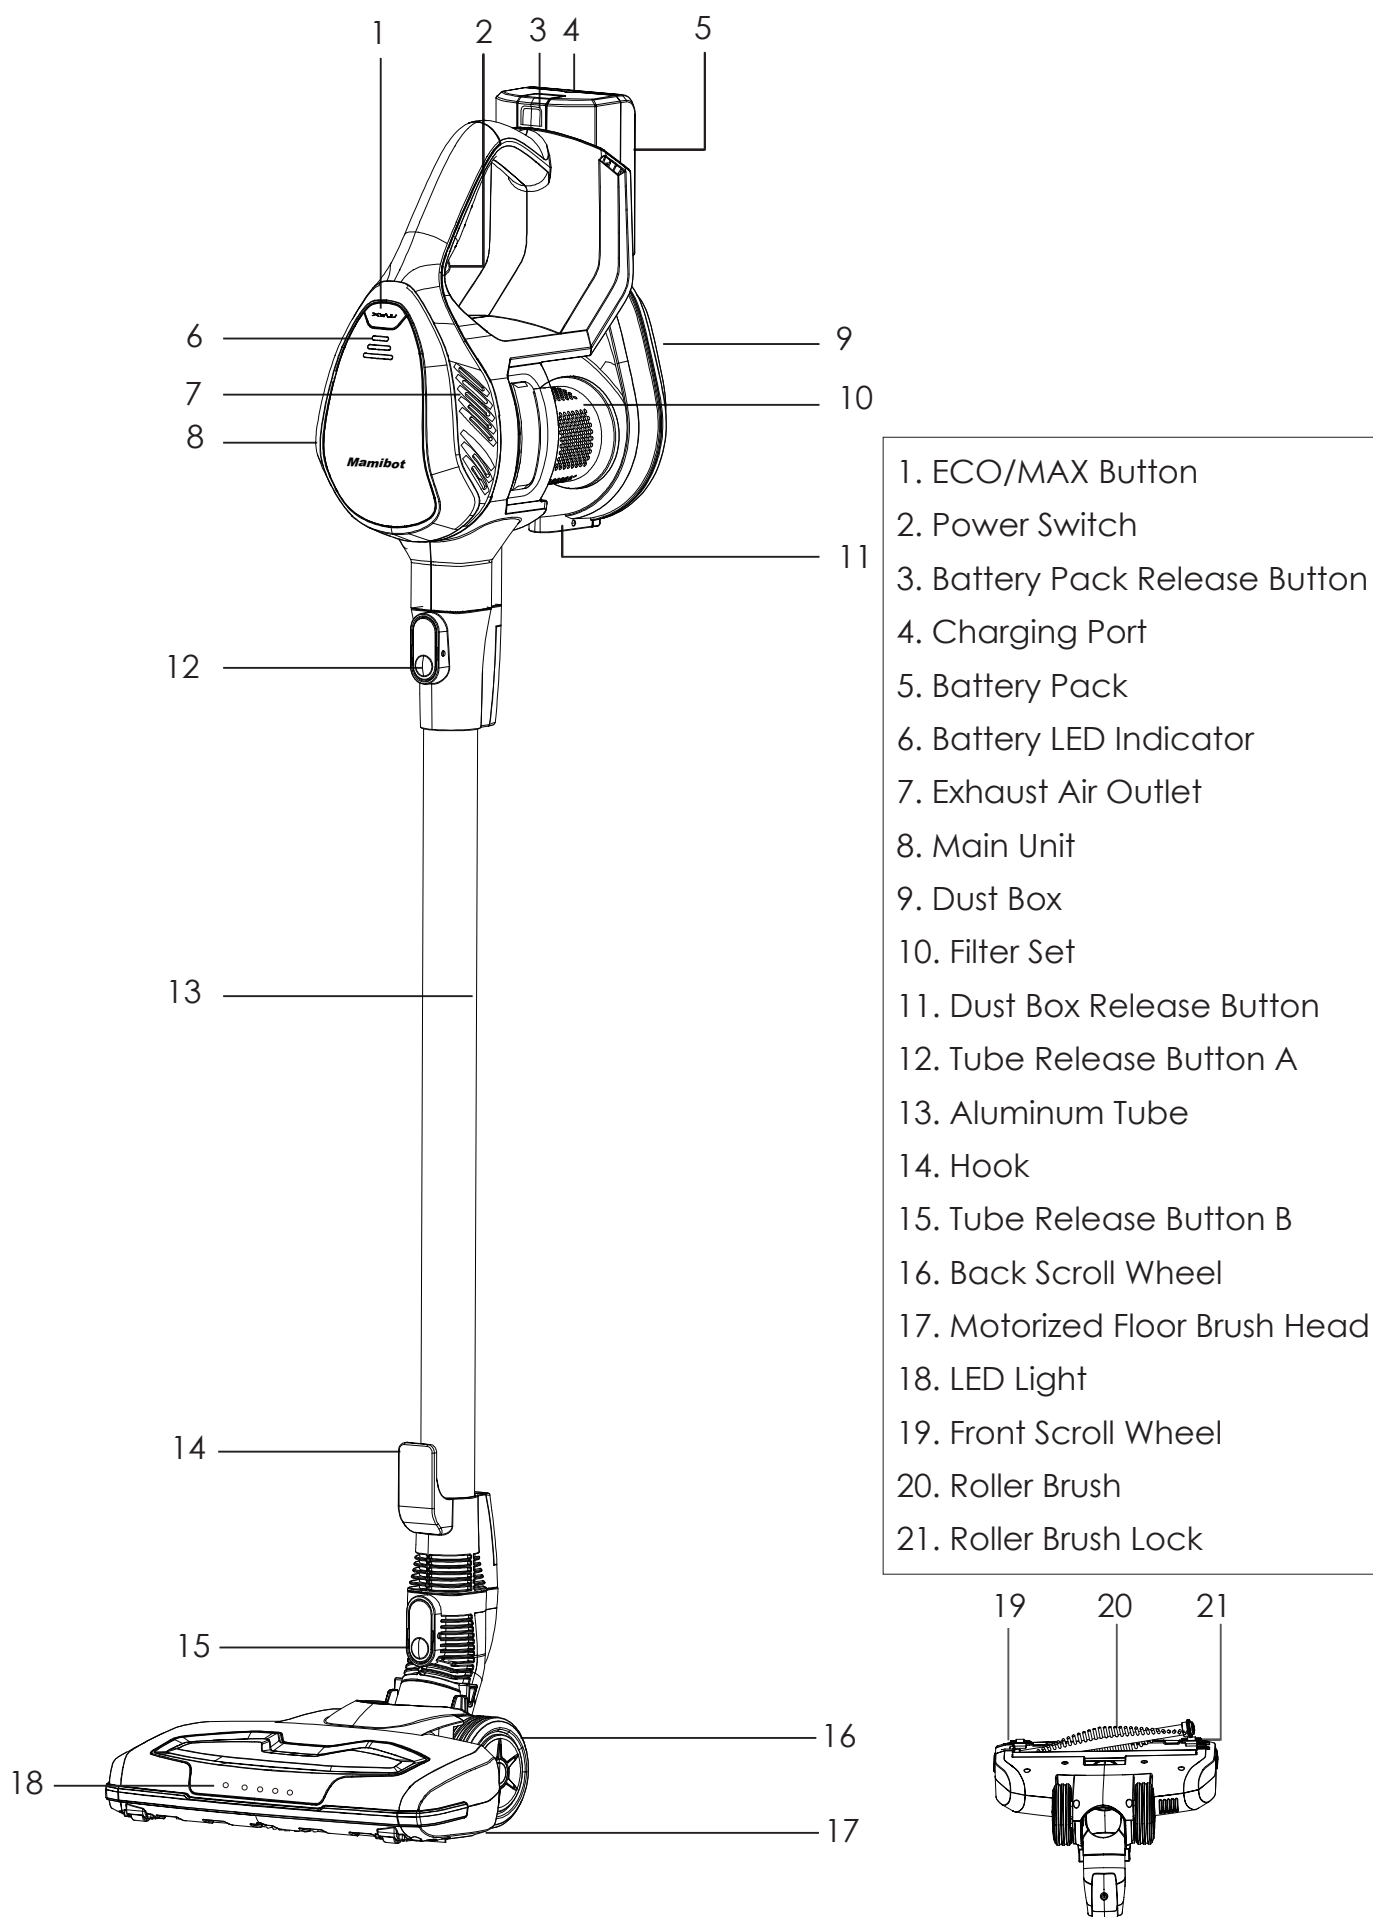

# V6 Pro Specification

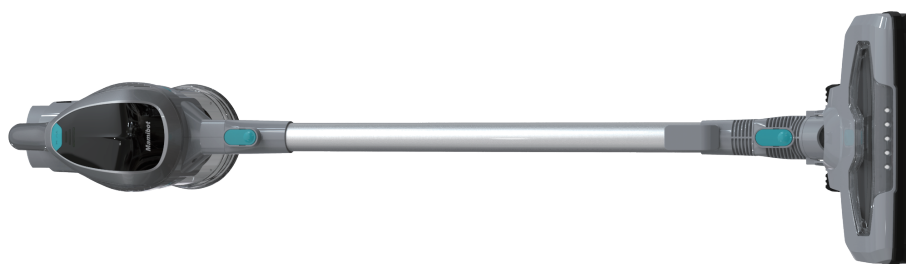


Product Model	V6 Pro
Size of V6 Pro	250*235*1250 mm
Net Weight	2.27 KG
Adapter Output	26V $\equiv$ 0.4A
V6 Pro Rated Power	135W
Battery Type	Li-ion Battery
Battery Capacity	2200mAh
Rated Battery Voltage	22.2V $\equiv$
Working Noise	$\leq$ 78 dB
Dust Box Capacity(Theoretical)	About 1.2L
Working Time	About 25-41 mins
Charging Time	About 5-6 hours
Working Mode	ECO Mode / MAX Mode


※ The data comes from the lab of Mamibot Manufacturing USA Inc. It may be slightly different with the users data due to different usage or working environment, please subject to the actual products.

For continues products improvement, we reserve the right to any technical and design change without prior notice.


## What's in the package?

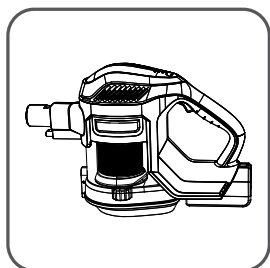


Main Unit x 1

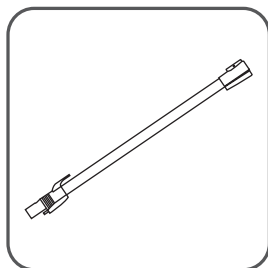


Aluminum Tube x 1

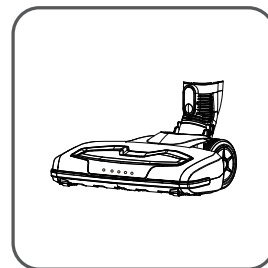


Motorized Head x 1

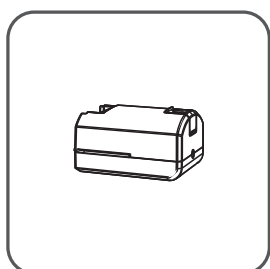


Battery Pack x 1

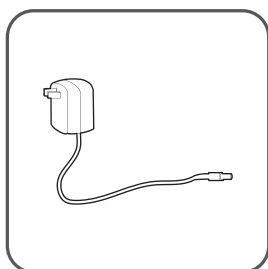


Adapter x 1

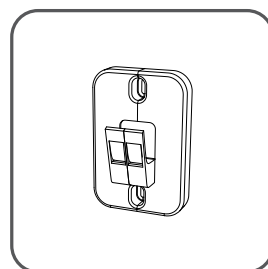


Wall Bracket x 1  
(Optional)

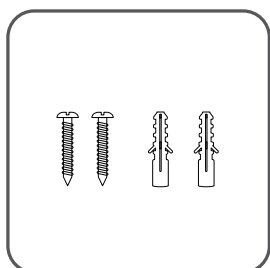


Screws & Anchors x 1  
(Optional)

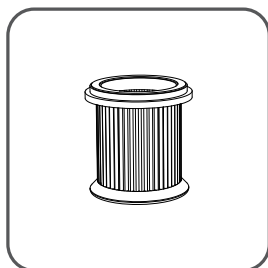


Hepa x 1

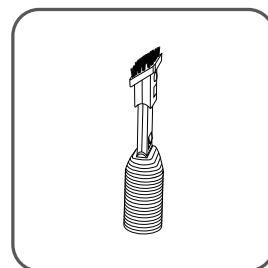

2 in1 Crevice x 1

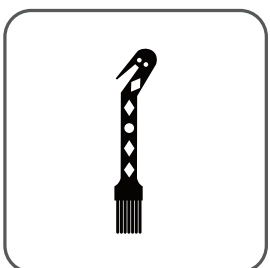


Cleaning Tool x 1

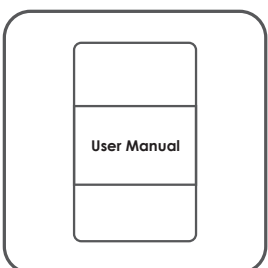

User Manual x 1

\* The packing contents and pictures may be slightly different from the final product, please subject to the actual product or confirm with the local distributor.


## Tips:

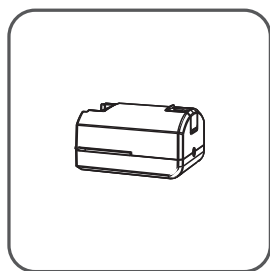

### Battery Pack


Please put the battery pack into V6 Pro, and fully charge it before use. Battery pack must be original, and should be replaced after 1 year of use.

Battery pack must be removed from V6 Pro before it is scrapped, and the battery pack must be put into the designated places or institutions according to the local regulations.

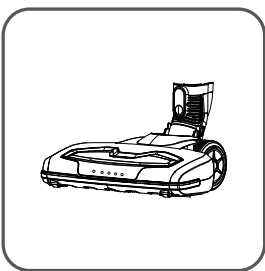


### Motorized Head

Connecting the aluminum tube before use. It is mainly used for floor cleaning.

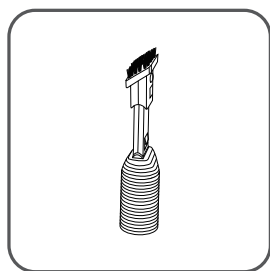

### 2 in 1 Crevice

Can be connected with aluminum tube or main unit directly for ceilings cleaning, fabric surface cleaning (such as curtains, sofa, etc) or other places that is hard to reach.

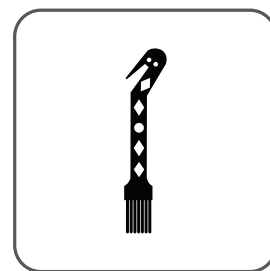


### Cleaning Tool

Can be used to cut off hair wrapping around the roller brush, to clean the cleaner head, dust box, Hepa filter and metal filter, etc.

## Assembling & Disassembling

To assemble or disassemble V6 Pro, please follow the instructions as below:

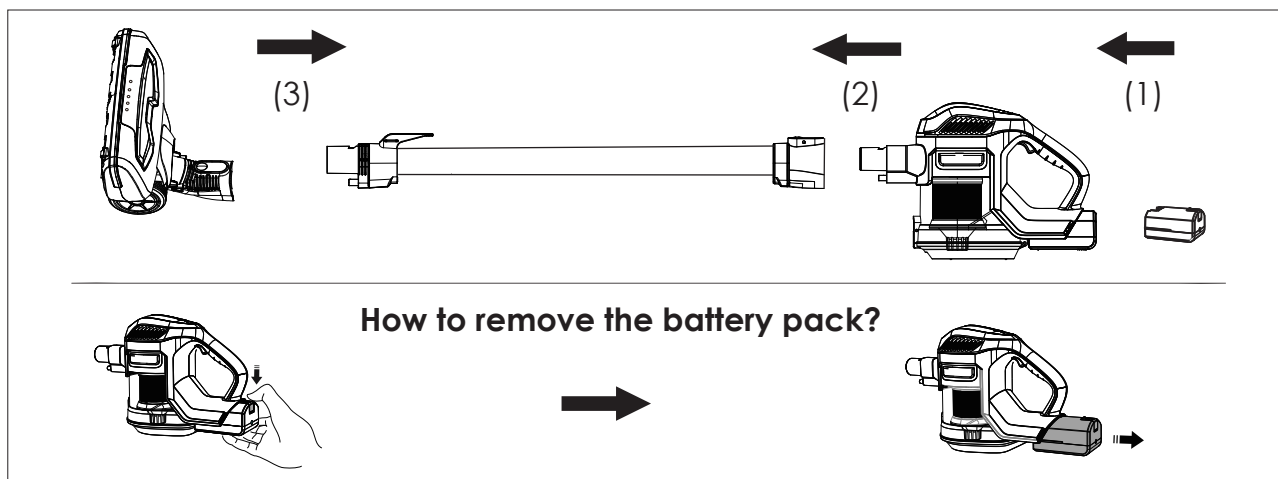

1. Insert the battery pack into the main unit (1), until you hear the “click” sound.


**\* Press the battery pack release button, users can pull battery pack out to detach.**

**The battery pack must be removed from V6 Pro before it is scrapped.**

2. Connecting the main unit and aluminum tube (2), until you hear the “click” sound.

3. Connecting the motorized head with aluminum tube (3), until you hear “click” sound.

Users can also connect the other brushes according to usage:

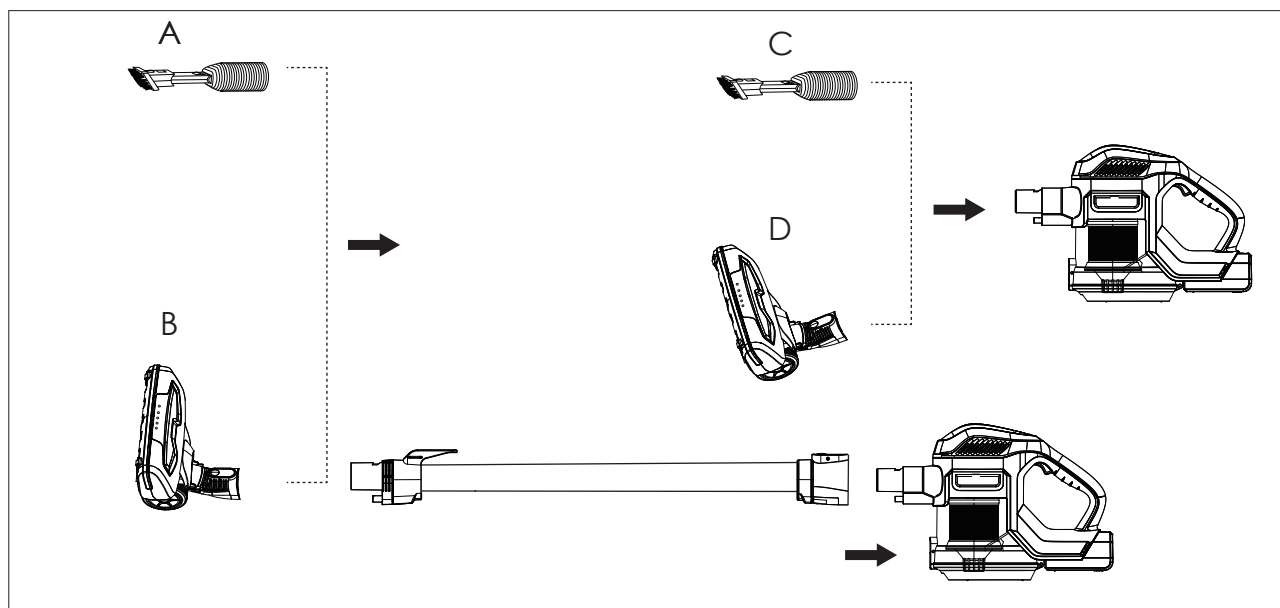


Notes:

- Make sure the connection is tighten before use.
- Press the release buttons to disassemble the main unit, aluminum tube and brushes.

## Charging

- Please fully charge the battery before initial use.
- The battery LED indicator light will be blinking blue when charging. The battery LED indicator light will be solid blue when fully charged .
- V6 Pro can not be switched on during charging.
- Please only use the original adapter to charge V6 Pro.
- Follow the below picture (4) (5) to charge V6 Pro properly:

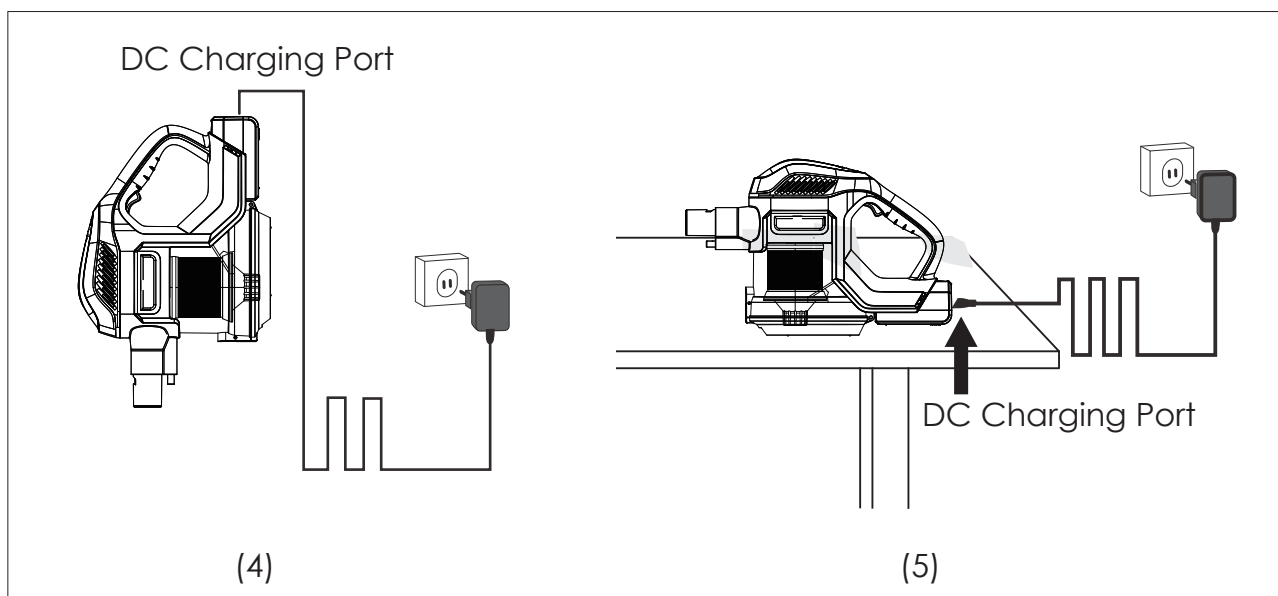

## Switch On/Off

1. Press the power switch button to switch on V6 Pro, and V6 Pro will enter into ECO mode by default.
2. Press the ECO/MAX mode button **MAX** to switch the suction level.
3. Press the power switch button again at ECO mode or MAX mode, V6 Pro will be switched off.
4. ECO mode: V6 Pro will work with lower suction and in lower noise.  
MAX mode: V6 Pro will work with higher suction and in higher noise.
5. The working time will be different when V6 Pro works in ECO and MAX mode, and also be different when V6 Pro works with different brushes.

Note:


- Do not start V6 Pro when checking for blockage which could result in personal injury.
- For indoor and car use only. Do not use it outdoor, or in a car that is in motion or while driving.
- Do not start V6 Pro on wet floor or immerse V6 Pro in water.

## Storage

1. Assembling V6 Pro properly before storage, then check and confirm the height between the V6 Pro and floor, it is suggested that the floor brush head should be just touching the floor properly (6).
2. If V6 Pro is **wall bracket version**, fixed the wall bracket tightly with screws according to the measured height, then place V6 Pro on the bracket properly.
3. Users can detach the main unit, and place the unit on the hook on the aluminum tube as (7) shows.

Note:

- The storage temperature must be 0-40°C (32-104°F).
- Charge V6 Pro regularly (approx. every 3 months) if you do not use it for a long time.

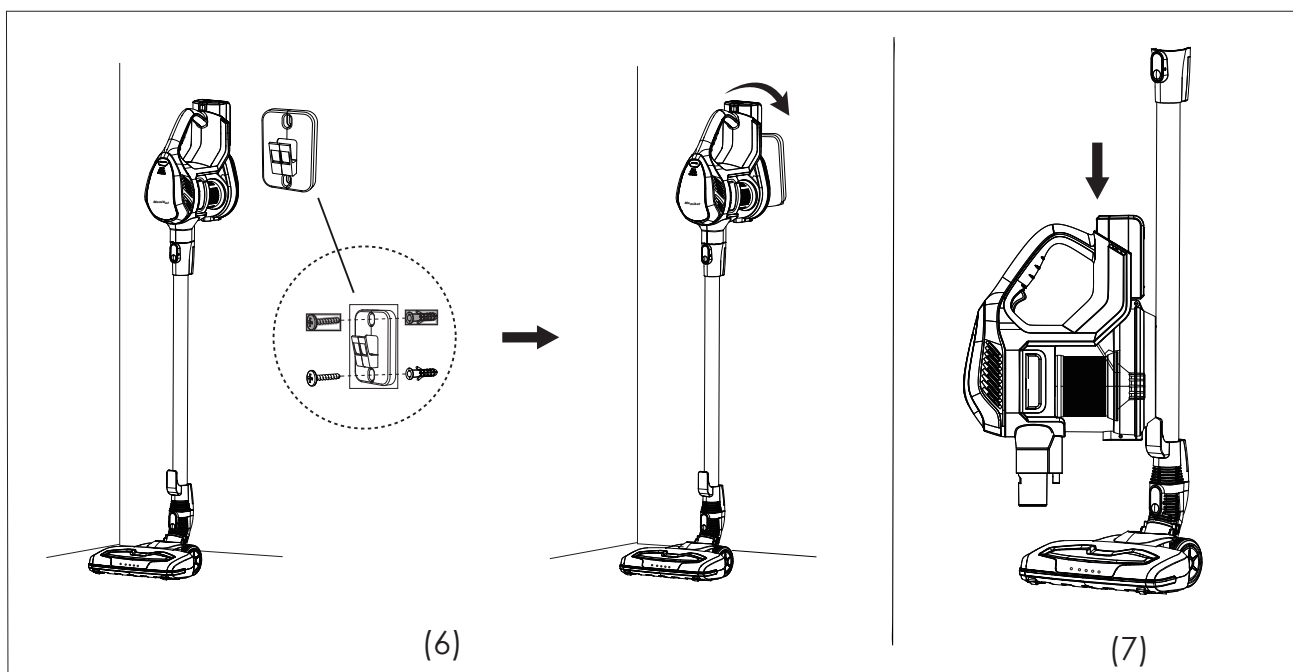

\* Wall bracket and its screws are optional parts, please confirm with the local sellers.

## Maintenance and Clean


To ensure a better performance of the V6 Pro cleaning, please maintain and clean it regularly.

\* Please unplug the power source, switch off V6 Pro before maintenance and clean.

### Empty the Dust Box


1. Press the tube release button A, and take down the main unit (8).
2. Press the dust box release button, then the dust will fall down automatically (9). Generally, you may only do like this to drop the dust, then close the dust box.

\* Do not wash the main unit and dust box with water.

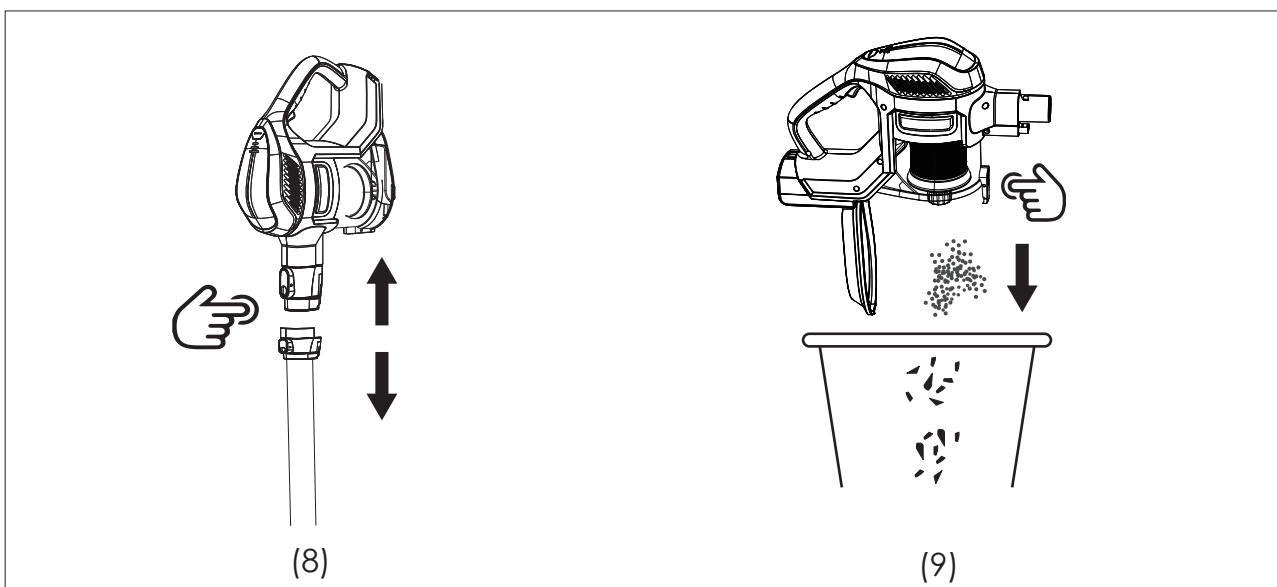




## Roller Brush Cleaning

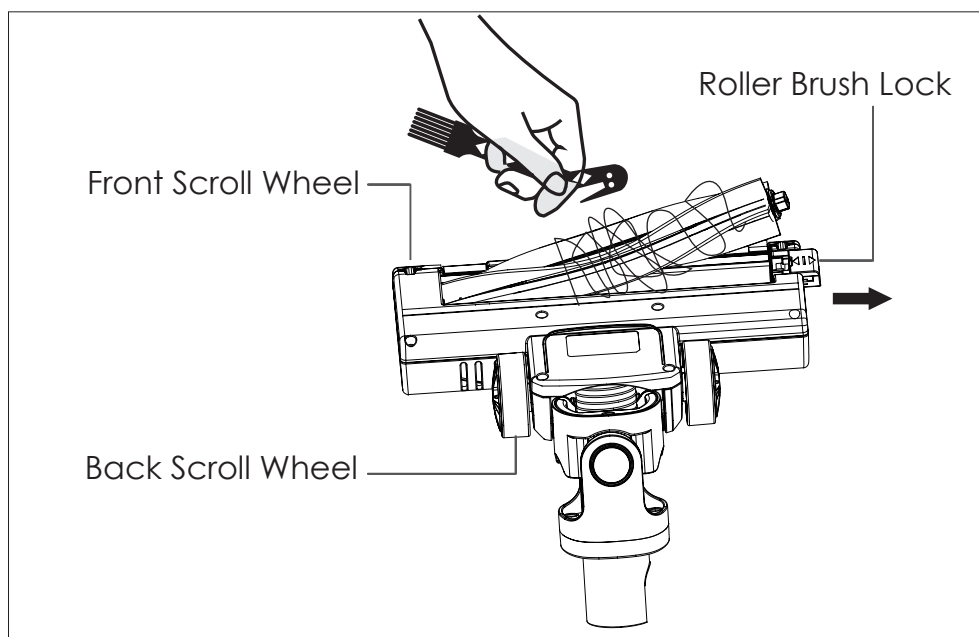1. Unlock the roller brush lock button, remove the lock and take down the roller brush.
2. Clean dust, hair, fabric particles on the roller brush with the cleaning tool, cut hair or other wrapping around the brush if it is tangled.
3. Cleaning the front scroll wheels and back scroll wheels with cleaning tool or soft mop.
4. Replace the roller brush according to usage.




## Filter Set Cleaning

1. Press the dust box release button, revolve the **filter set** anticlockwise from  to , and take off the filter set (11).
2. Take out the HEPA filter (12), and clean the Hepa filter by cleaning tool (13).
- \* **We don't recommend users to wash the Hepa with water to avoid lowering the suction and cleaning effect.**
3. Cleaning the metal filter by cool water (14), and dry it (15) completely before next use.

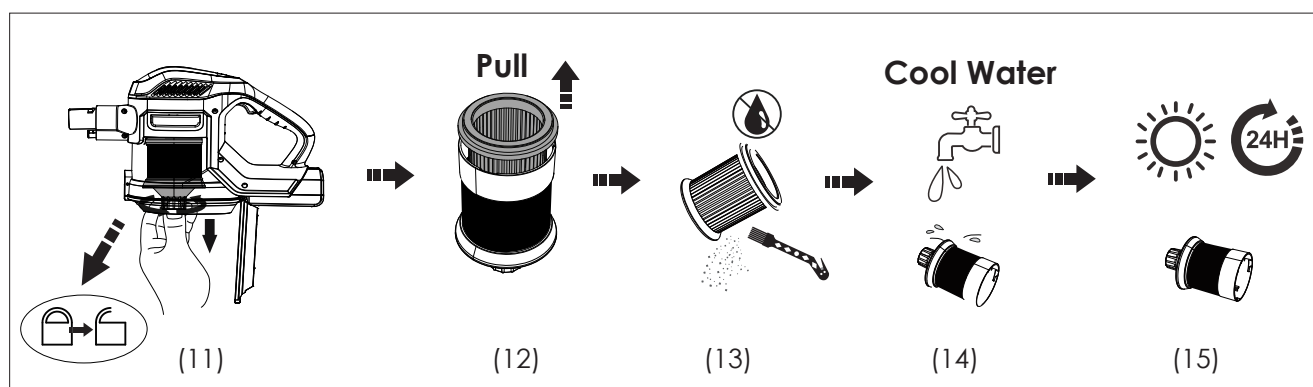


4. Do not clean the parts as shown:

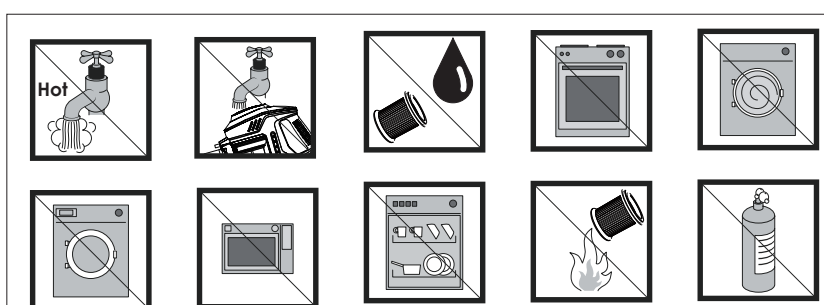




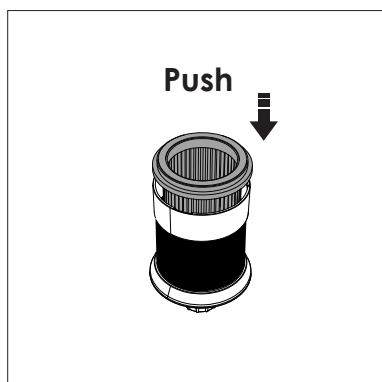

## 5. How to install the Filter Set:

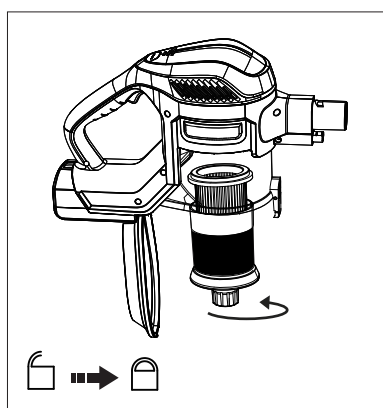

(1). Put the Hepa into the metal filter.



(2). Hold the main unit, and put the filter set in the main unit, then revolve the main unit clockwise from  to  tightly.

\* Make sure the filter set is dry before installation.

## Cleaning/Replacement Frequency Recommended

Parts	Cleaning / Replacement Frequency Recommended
Roller Brush	Clean every 2-3 times use; Replacment every 3-6 months.
Hepa Filter	Clean every 1-2 times use; Replacment every 3-6 months.
Metal Filter	Clean every 1-2 times use.
Dust Box	Clean after each use.
Battery Pack	Replacement after 6-12 months of use.
Scroll Wheels	Clean every 2-3 times use.
<b>Note:</b> Above frequency is only for your reference. The final cleaning/replacment frequency should subject to your exact usage.	

## TROUBLESHOOTING

If there is any failure of V6 Pro cordless vacuum cleaner, please follow below solutions to check and solve the problems. If none of the solution is workable, please contact the authorized agent for inspection and further solutions.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Machine does not work.	The battery power is low.	Check the battery power and recharge it.
The machine can not suck ash or suction is very weak.	<ul style="list-style-type: none"> <li>• The dust box may be full.</li> <li>• Lack of battery power.</li> <li>• The filter set is blocked.</li> <li>• Non-dried filters after cleaning.</li> <li>• Air channel is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty dust box.</li> <li>• Charge the cleaner.</li> <li>• Clean the filter set.</li> <li>• Dry the filters after cleaning.</li> <li>• Check the air channel and take out the blocked debris.</li> </ul>
Dust escaping from vacuum.	<ul style="list-style-type: none"> <li>• Dust box is full.</li> <li>• The filter set may not be installed.</li> </ul>	<ul style="list-style-type: none"> <li>• Empty dust box.</li> <li>• Check to see if the filter set is installed properly.</li> </ul>
Failure of floor brush.	The brush is tangled by cables, hair or other trashes.	Check and clean the brush.
Short running time.	<ul style="list-style-type: none"> <li>• Aged battery pack.</li> <li>• Non-fully charged battery pack.</li> <li>• Over heated or over cooled battery pack.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the battery pack.</li> <li>• Recharge the battery pack.</li> <li>• Cool down and restart.</li> </ul>
No LED indicator or flashing when charging.	<ul style="list-style-type: none"> <li>• Adapter is not plugged in properly.</li> <li>• Adapter is not original.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the connection of the cleaner, make sure it is assembled properly.</li> <li>• Use the original adapter.</li> </ul>
Battery leakage.	Battery reaches life time or in no use for long time.	Replace the battery in time.

## Product Warranty

- The V6 Pro has a 1 year limited warranty against original defects in workmanship or material.
- The warranty only applies to the authorized distributors of Mamibot.
- Improper usage or not in accordance with the user manual will void the warranty.
- The application of force majeure will be invalid.
- Normal reductions, such as battery aging, filters aging, brushes aging are not guaranteed.

If there are defects in V6 Pro due to faulty materials, workmanship or function within warranty period from the date of purchase or delivery, please contact your local retailers or authorized dealers for repairing or replacement.

This warranty will automatically become null and void and shall not be applicable to any purchased products if:

- Normal wear and tear (E.g.: Hepa, roller brush, etc).
- Reduction in battery discharge time due to battery age or use.
- Damage caused by assembling or installing that not in accordance with the instructions of manufacturer.
- Damage caused by using V6 Pro for any other purposes than normal indoor environment.
- Damage caused by accident, abuse or misuse.

### **Note:**

Please replace the battery pack after 1 year of purchase.

Please keep and provide your purchase invoice when make a claim.

## Correct Disposal & Compliance Standards



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



The product has been tested and found to be compliance of the Council Directive 2014/30/EU, 2014/35/EU, and the council RoHS 2.0 Directive (EU) 2015/863/EU.

We reserve the right to changes in text, design, and technical specifications which are subject to change without prior notice.

**Manufacturer:**

**Mamibot Manufacturing (Shanghai) Co.,Ltd.**  
**North 21th, No.1 Building, LN1040 Caoyang Rd, Shanghai, P.R.C.**

**Supervised by**

**Mamibot Manufacturing USA Inc.**  
**One Commerce Center, 1201 Orange St, Wilmington, DE 19899 USA**  
**Tel: 001 302-428-9888   sales@mamibot.com   www.mamibot.com**