


Corded Steam Wet & Dry Vacuum Cleaner

Mamibot Corded Flomo SE

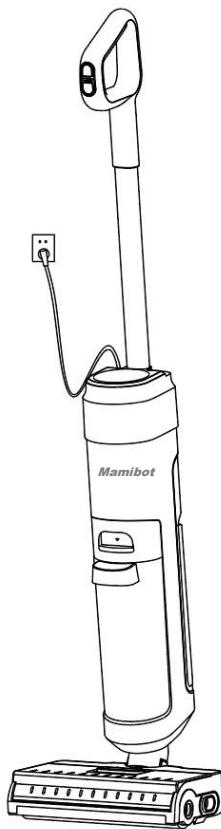

User Manual 251203 Ver.

Please read this manual carefully before use and keep the manual for future reference.

CONTENTS

Important Tips	1
Specifications	4
Package Contents	4
Product Overview	5
Handle Installation Instructions	7
Self-Drying the Roller Brush	8
Starting to Use	8
One Touch Self-Cleaning	10
Filling the Clean Water Tank	11
Clean the Dirty Water Tank	11
Clean the Filter	13
Clean the Brush Guard	13
Clean the Roller Brush	14
Troubleshooting	15
Recommended Cleaning / Replacement Frequency	17
Warranty	17
Compliance Standards	17

IMPORTANT TIPS

READ ALL THE INSTRUCTIONS BEFORE USE. It may cause electric shock, fire and/or serious injury if not followed the warnings and instructions .

Warning

To avoid from the risk of fire, electric shock, or injury:

- Use only as described in this user manual. Use only the accessory parts which original manufacturer provided or suggested.
- Only for indoor use, on the hard floor or carpet with short hair.
- Do not allow to be used as a toy. Please pay more attention when there are children or pet around it.
- Do not touch charger or its charging pins with wet hands when it is connecting to the power source.
- The steam is high temperature, please keep it away from children, animals and your body parts.
- Do not immerse the appliance in liquid.
- Do not use without the filter.
- Pay much attention when cleaning on the stairs.
- Ensure the switch is at the off-position before picking up or carrying the appliance.
- This appliance can not be used by children aged 8 years and under, or persons who is with physical, sensory or mental disability. People who is lack of experience must have safety instruction before they use the appliance to keep them aware the hazards involved. Children shall not play with, use or clean or repair the appliance if they are without supervision.
- Turn OFF and plug out from electrical outlet if the appliance will not be used for a long time.
- Always clean the dirty water tank after each use to avoid from any blockage, which may lead to low suction power, motor overheating, or reduce the service life of the appliance.

- Store the appliance at a shaded and dry place after each use.
- Do not use the appliance when the water depth is more than 5mm on the surface.
- Do not place or dip appliance into water or try to clean flooded areas.
- Plastic packing bag is dangerous. To avoid from the suffocation, please keep the children away from it.
- Only use the type and amount of liquid specified under the operation section of this guide.
- Do not use the damaged cord or plug. If the cord or plug is damaged, it must be replaced by Mamibot, or its service agent or qualified persons.
- Do not use the appliance to pick up any hazardous material or chemicals, such as solvent, drain cleaner, strong acids, or strong alkali.
- Do not use the appliance in any closed space filling with vapour given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapour.
- Do not use the appliance to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use the appliance to pick up sharp objects, such as metallic nails, pieces of glass, metal paper clips, or pins.
- Stop using immediately if the appliance is overheating, making unusual noises, producing unusual odors.
- To avoid the storage base from short-circuited, do not use it if any damage for its cable or charger.
- Keep the power cable, charger and its wire far away from heated surfaces, such as fireplace or heater, to avoid from any deformation.
- To grasp the plug to plug off it, instead of grasping its cable.
- Do not use the appliance when it is damaged or modified. Damaged or modified appliances may cause fire, explosion or risk of injury.

- Do not use the appliance in a high temperature environment.
- Do not incinerate the appliance even it is damaged.

Important Safety Points

- Only qualified service people will be allowed to repair the appliance. And only appointed replacement parts be allowed to be used.
- Do not attempt to modify any parts of the appliance.
- Do not use or store the appliance in extremely hot or cold environment (below 0°C /32° F or above 40° C/104° F).
- If the appliance has ever been dropped, damaged, left outdoors, or dropped into water, can not work as its usual, please return it to the service center.
- The appliance is only to be used with the original power supply unit provided with the appliance.

About Cleaning

- 1) If large amount of cleaning liquid entering into the motor, it may cause damage to the appliance.
- 2) Do not use any acidic or alkaline liquid to the appliance.
- 3) Dirty water disposal must comply with local regulations.

**Note: The line drawings in this document are for reference only.
Please refer to the final physical objects.**

Specifications

Product Name	Corded Steam Wet & Dry Vacuum Cleaner
Model No.	Corded Flomo SE
Size of Main Unit	270*225*1180 mm
Input Voltage	220-240VAC50/60Hz
Steam Rated Power	750W(BL)
Working Mode	Steam mode, Wet mopping mode, Dry mopping mode, Turbo mode
Steam Heating Type	Boiler heating
Steam Preheating Time	30-60 seconds
Max. Boiler Temperature	110°C (=230°F)
NTC Protection	Yes
Clean Water Tank Capacity	About 600 ml
Dirty Water Tank Capacity	About 800 ml

Date provided by the lab of Mamibot Manufacturing USA Inc. It may be slightly different with the users data due to different usage or working environment, please subject to the actual products. For continuous products improvement, we reserve the right to any technical and design change without prior notice.


Package Contents

Main Unit x 1 pcs	Handle x 1 pcs	Screw & Screw Driver x 1 set
Adapter x 1 pcs	Roller Brush x 1 pcs	Storage Base x 1 pcs
HEPA x 1 pcs	Cleaning Tool x 1pcs	User Manual x 1 pcs
Strainer (wet and dry separator) x 1pcs		


Note: Package contents of different batches may be slightly different and they are subject to the actual received products.

PRODUCT OVERVIEW


Product Introduction

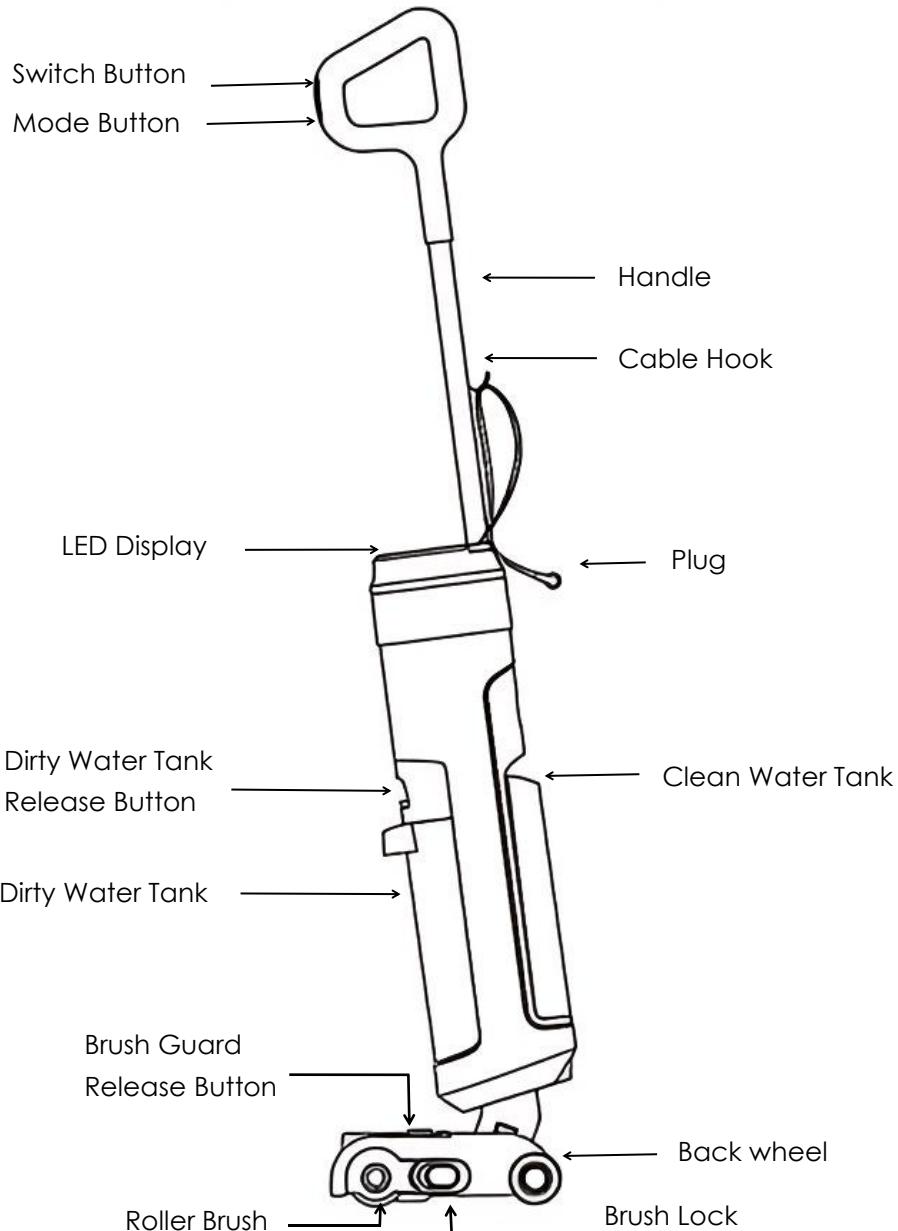


Storage Base

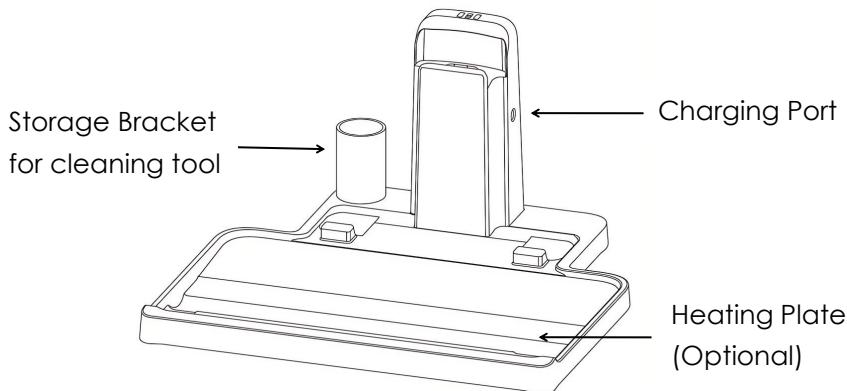

Display Screen

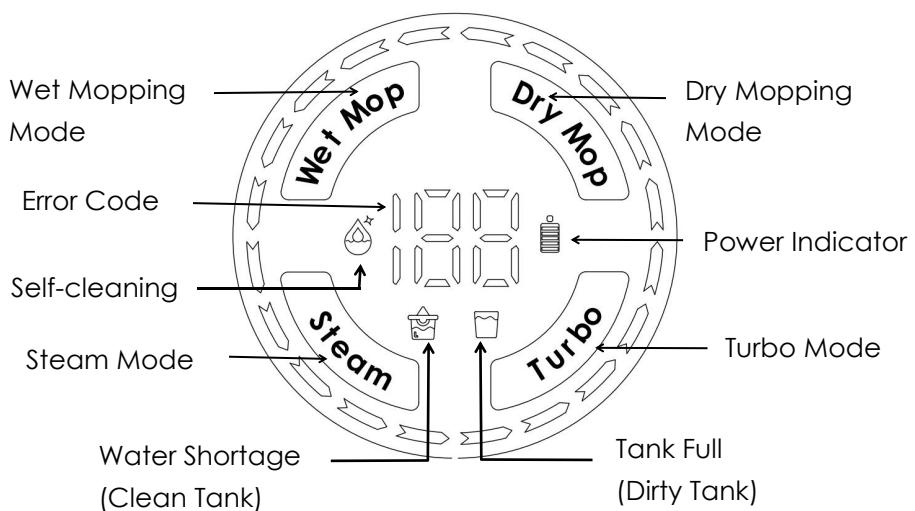

Handle Installation Instructions

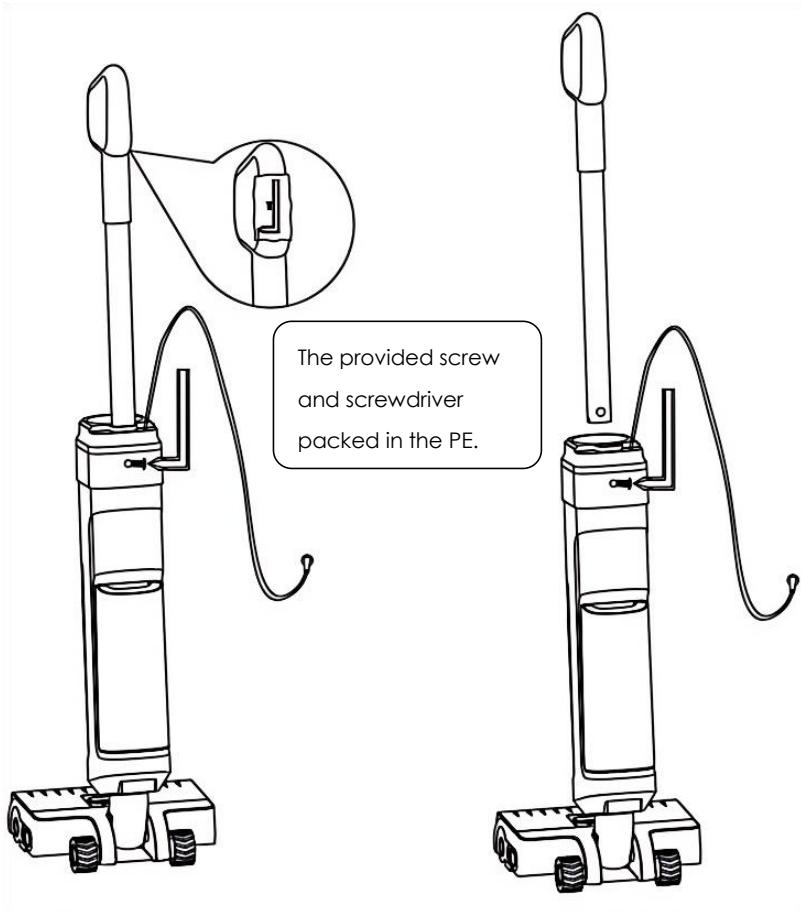


1. Insert the handle into the body of the appliance. Screw up the handle with a screwdriver. Ensure the handle is firm without any looseness.

2. If you want to unload the handle, please remove the screw on the back of the appliance, and pull the handle out.

Self-Drying the Roller Brush

1. After a self-cleaning cycle, the machine will automatically dry if left on the station (The station stays hot if the machine is removed).
2. The heating temperature will not be more than 45°C and the drying time will not be longer than 12hrs. During the drying time, the roller brush will rotate once every 45 minutes.
3. **WARM TIPS: Plug in the base first, then place the unit on it, make sure the power indicator is on.**

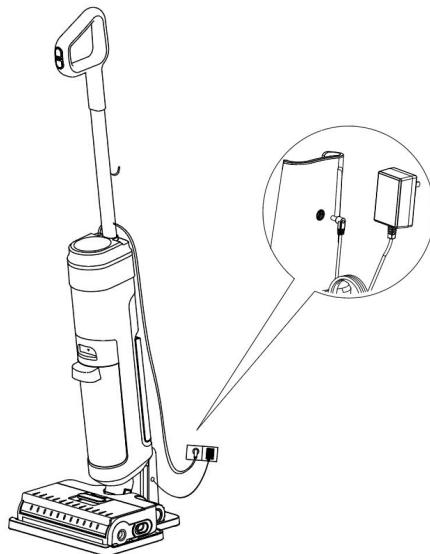

Note:


- Only the supplied adapter will be permitted to plug into the storage station.

Starting to Use


Note: Please plug the appliance into the power source before use.

Hold and press the button ① for 2 seconds to power the device on.

Press the button ① for 1 second, the appliance will start AUTO cleaning mode. Hold and press it for 2 seconds again to power off the device.

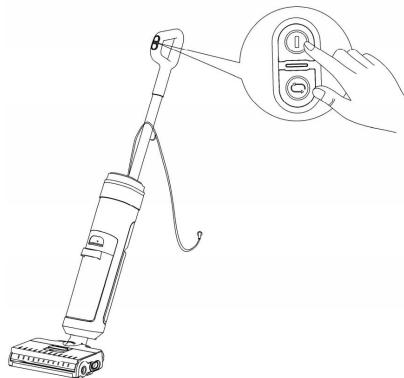
**Cleaning modes/Voice on/off:**

 1. Press the mode button  for 1 second to start the cleaning as a cycle: Steam Mode--Dry Mode--Wet Mode
2. Press mode button for 2 seconds, enter Turbo Mode, press again to cancel.



3. Hold and press the switch button  and mode button  for 3 seconds to turn on or turn off the voice.

※ Do not recline the device more than 140° to avoid from water leakage.

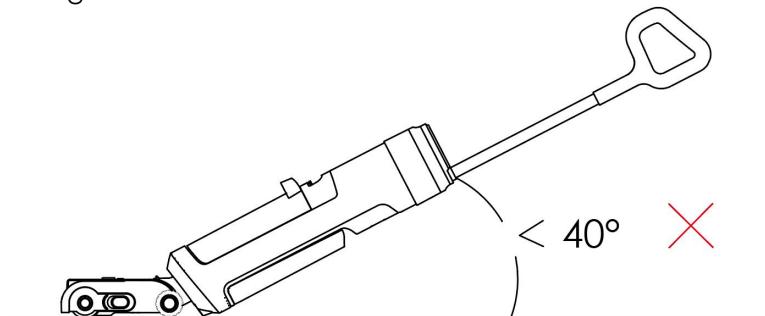


Place the device on the storage base vertically after use for self-cleaning and storage.

One Touch Self-Cleaning



※ Only when the device and the storage base are plugged in, the self-cleaning can be started.

- 1.The device upright sit on the storage base and make sure the clean water tank is full.
2. Short press the  button on the handle, the self-cleaning indicator will be on, then the self-cleaning starts.
3. Please clean the dirty water tank and the HEPA after the self-cleaning is done.

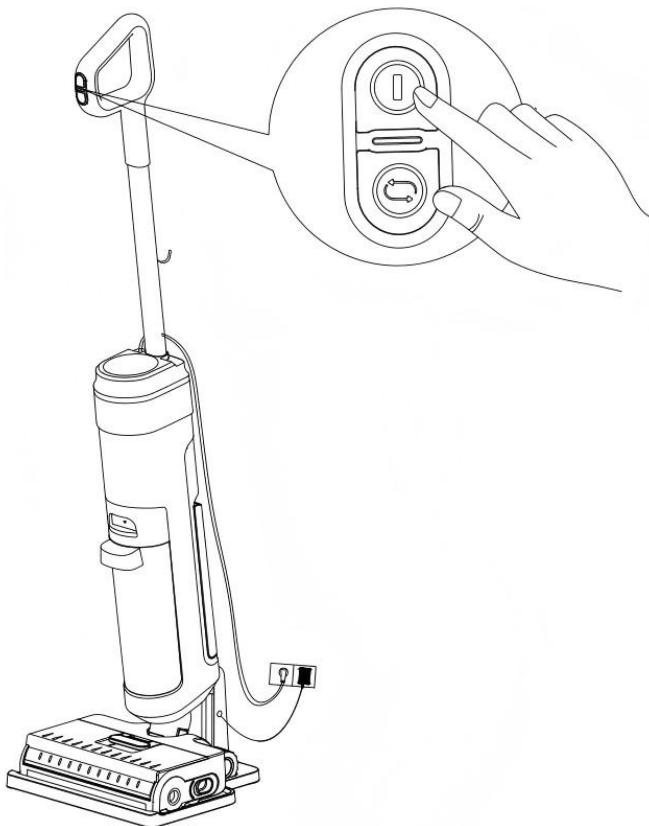

Filling the Clean Water Tank

① Take out the clean water tank by pressing the water tank release button.

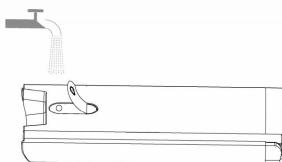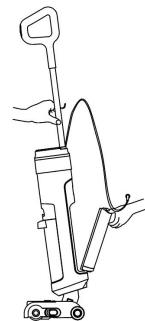

② Fill the clean water: Close the rubber lid firmly after adding water.

Note:

Only use water under 140F° / 60C° .

DO NOT USE HOT WATER.


Don't beyond the water warning line.

③ Place the tank back to the device.

Please be sure the tank is well placed.


Note:

- Do not add dirty water into the clean water tank.
- Do not add any corrosive or flammable liquids or detergent into the water tank.
- It is normal if there is some water in the water tank at the first use, tests and inspections are proceeded before goods leaving factory.

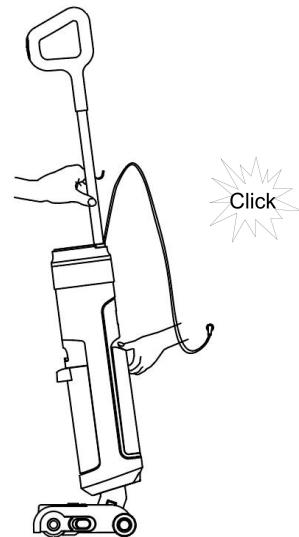



Clean the Dirty Water Tank

Note: It is recommended to empty the dirty water tank after each self-cleaning done.

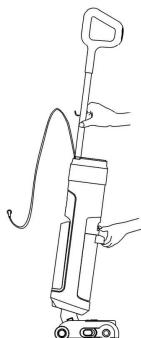


① Take the dirty water tank out by pressing dirty water tank release button.

② Hold the tank with one hand and pull up the lid with another hand to empty the dirty water. Use the **strainer** to separate the wet and dry waste.

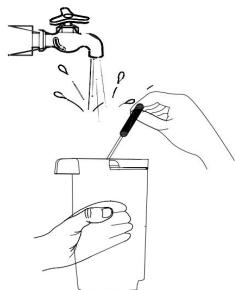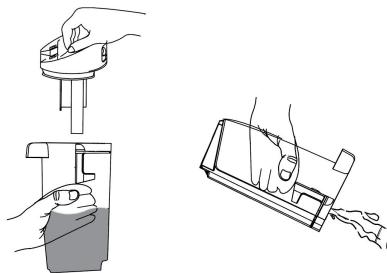

③ Flush the tank and its lid with clean water. Clean the inner wall of the tank with the provided cleaning tool.

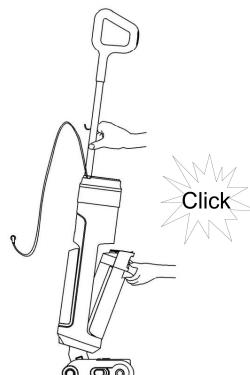


④ After the cleaning done, put the water tank back. Please be sure the tank is well placed.

Clean the Filter


Note: It is suggested to clean the filter after each use.

Remove the filter from the top of the dirty water tank. Tap it slightly to drop off the dust on it, then flush it with clean water and cleaning tool, dry it after each use.

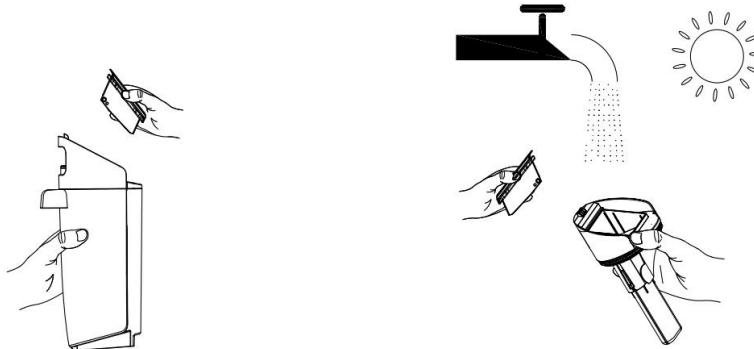



Clean the Brush Guard

1. Remove the brush guard by pressing the brush guard release button and wash it with clean water.
2. Please load it back correctly avoid from any leakage.

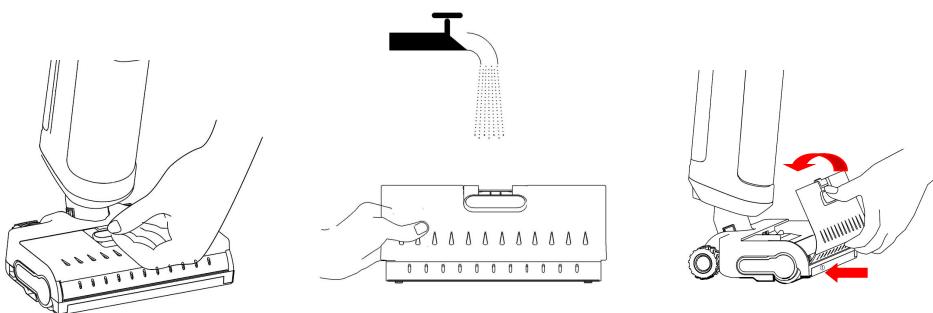



Clean the Roller Brush

① Hold and press the roller brush release button with your thumb and index fingers, the pull out the roller brush horizontally as picture instructs.

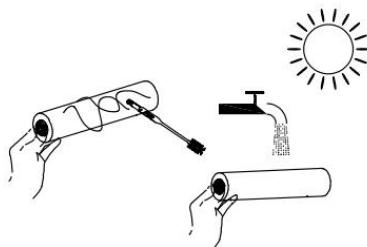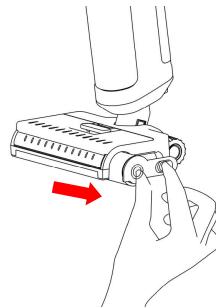

② Remove hair and debris on the roller brush with the cleaning tool, and wash it with clean water.
The roller brush must be completely dried before use.

③ Remove hair and dirties from the brush seat and suction port with a tissue or wet cloth.

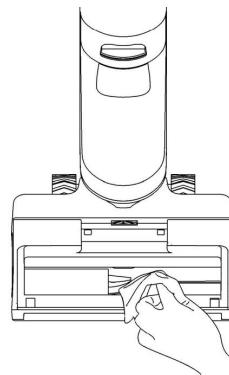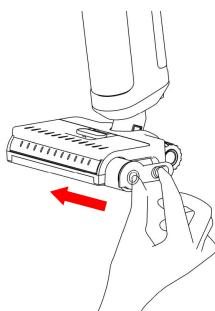

④ Push the roller brush back as picture shows after cleaning it.

Troubleshooting

If the appliance is not working properly, the display screen will show an error code. Please refer to the trouble shooting table to find the solution.

Error Code	Possible Cause	Solution
	Dirty water tank full	Empty the dirty water tank and clean the metal conductive pole.
	Clean water tank empty	1. Please add the clean water. 2. If still keep alarming, please remove the water tank and start the unit until the machine alarms again, and then put back the water tank.
E1	Roller brush is blocked	Please remove the blockage on the roller brush.
E2	Fan motor abnormal	Please contact customer service.
Failure to turn on the device	1. The handle may not be placed properly. 2. The plug is not plugged in properly.	1. Check whether the handle is firmly inserted and locked with screw. 2. Re-plug in the power source.
The vacuum is weakness than before.	1. The HEPA is blocked or wet. 2. The pipeline is blocked.	1. Clean and dry the HEPA. 2. Clean the pipeline.

Corded Flomo SE does not work in Self-cleaning mode.	1. Corded Flomo SE does not connect to power source. 2. Storage base does not connect to power source. 3. The dirty water tank is full. 4. There is shortage of clean water tank.	1. Please check and connect to the power source properly. 2. Please empty the dirty water tank. 3. Please fill up the clean water tank.
There is no steam blasting or the steam volume is small.	1. The working mode is not steam mode. 2. The steam holes are clogged. 3. The clean water tank is short of water.	1. Switch the working mode. 2. Use a needle to clear the steam holes. 3. Add more clean water.
Corded Flomo SE doesn't work.	1. The dirty water tank is full. 2. The dirty water tank is not installed. 3. The roller brush is not place properly. 4. The heating pack is overheated and NTC works.	1. Please empty the dirty water tank. 2. Please check and install the dirty water tank. 3. Please check and install the roller brush. 4. Cooling the device down then use it.
There are water stains / marks on the floor after use.	1. The roller brush is aged. 2. The filter is dirty and blocked. 3. The suction inlet is blocked.	1. Replace the aged brush. 2. Clean and dry the filter. 3. Clean the suction inlet.

If the problems can not be solved through the mentioned methods, please contact the local seller directly.

Recommended Cleaning / Replacement Frequency

Part	Recommendation
Clean water tank & dirty water tank	Clean after each use.
HEPA	Clean and dry after each use. Replace it every 3-6 months.
Filter	Clean after each use
Roller Brush	Clean and dry after each use. Replace it every 3-6 months.
Brush Guard	Clean after each use.
Suction Port	Clean after each use.
Wheels	Clean every month.
Storage Station	Clean every 2-3 times use.

Note:

Above frequency is only for your reference. The final cleaning / replacement frequency should depend on the usage.

Warranty

- The Corded Flomo SE has a 1 year limited warranty against original defects in workmanship or material.
- The warranty only applies to the authorized distributors of Mamibot.
- Improper usage or not in accordance with the user manual will void the warranty.
- The application of force majeure will be invalid.
- Normal reductions, such as roller brush again, HEPA aging are not guaranteed.

※ Please keep and provide your proof of purchase, S/N when make a claim.

Compliance Standards



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



The product has been manufactured according to the standard of:

2014/30/EU, 2014/35/EU, (EU) 2023/826, (EC) No 1907/2006

We reserve the right to changes in text, design, and technical specifications which are subject to change without prior notice.

MADE IN CHINA

Manufacturer:

Mamibot Manufacturing (Shanghai) Co.,Ltd.
37B, No.1188, North Kaixuan Road, Shanghai, P.R.C

Supervisor:

Mamibot Manufacturing USA Inc.
One Commerce Center, 1201 Orange St, Wilmington, DE 19899 USA
Tel: 001 302-428-9888 sales@mamibot.com www.mamibot.com