


Cordless Steam Wet & Dry Vacuum Cleaner

Cordless Flomo S

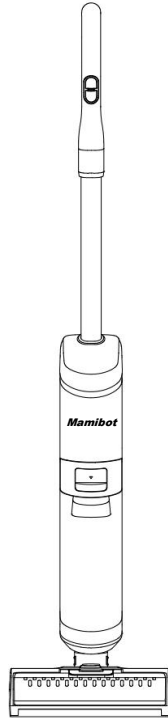

User Manual

Please read this manual carefully before use and keep it for future reference.

CONTENTS

Important Tips	1
Specifications	4
Package Contents	4
Product Overview	5
Handle Installation Instructions	7
Charging Instructions	8
Self-Drying the Roller Brush (optional)	8
Starting to Use	9
Filling the Clean Water Tank	11
Cleaning the Dirty Water Tank	12
Cleaning the Filter	13
Cleaning the Brush Guard	13
Cleaning the Roller Brush	14
Trouble Shootings	15
Cleaning / Replacement Frequency Suggestions	16
Warranty	17
Compliance Standards	17

IMPORTANT TIPS

READ ALL THE INSTRUCTIONS BEFORE USE. It may cause electric shock, fire and/or serious injury if do not follow the warnings and instructions .

Warning

To avoid from the risk of fire, electric shock, or injury:

- Use only as described in this user manual. Use only the accessory parts which original manufacturer provided or suggested.
- Only for indoor use, on the hard floor or carpet with short hair.
- Do not allow to be used as a toy. Please pay more attention when their is children or pet around it.
- Do not touch charger or its charging pins with wet hands during charging.
- The steam is high temperature, please keep it away from children, animals and your body parts.
- Do not immerse the appliance in liquid.
- Do not use without the filter.
- Pay much attention when cleaning on the stairs.
- Ensure the switch is at the off-position before picking up or carrying the appliance.
- This appliance can not be used by children aged 8 years and under, or persons who is with physical, sensory or mental disability. People who is lack of experience must have safety instruction before they use the appliance to keep them aware the hazards involved. Children shall not play with, use or clean or repair the appliance if they are without supervision.
- Turn OFF and plug out from electrical outlet if the appliance will not be used for a long time.
- Always clean the dirty water tank after each use to avoid from any blockage, which may lead to low suction power, motor overheating, or reduce the service life of the appliance.

- Store the appliance at a shaded and dry place after each use.
- Do not use the appliance when the water depth is more than 5mm on the surface.
- Do not place or dip appliance into water or try to clean flooded areas.
- Plastic packing bag is dangerous. To avoid from the suffocation, please keep the children away from it.
- Only use the type and amount of liquid specified under the operation section of this guide.
- Do not use the damaged cord or plug. If the cord or plug is damaged, it must be replaced by Mamibot, or its service agent or qualified persons.
- Do not use the appliance to pick up any hazardous material or chemicals, such as solvent, drain cleaner, strong acids, or strong alkali.
- Do not use the appliance in any closed space filling with vapour given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapour.
- Do not use the appliance to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use the appliance to pick up sharp objects, such as metallic nails, pieces of glass, metal paper clips, or pins.
- Stop using immediately if the appliance is overheating, making unusual noises, producing unusual odors.
- To avoid the charging base from short-circuited, do not use it if any damage for its cable or charger.
- Keep the charger and its wire far away from heated surfaces, such as fireplace or heater, to avoid from any deformation.
- To grasp the charger to plug off it, instead of grasping its cable.
- Do not use the appliance when it is damaged or modified.
Damaged or modified batteries may cause fire, explosion or risk of injury.

- Do not use the appliance at the environment of fire or excessive temperature above 40° C, it may cause an explosion.
- Follow all instructions when charging the appliance.
- The appliance must be disconnected from the power supply when removing the battery. Keep battery out of the reach of children. Never put batteries in mouth. If swallowed, contact your physician or local professional hospital.
- Do not incinerate the appliance even it is damaged. The battery must be disposed safely. It must be removed from the appliance before it is scrapped to avoid from any explosion. The appliance is only to be used with the power supply unit provided with the appliance.

Important Safety Points

- Only qualified service people will be allowed to repair the appliance. And only appointed replacement parts be allowed to be used.
- Do not attempt to modify any parts of the appliance.
- Do not use or store or charge the appliance in extremely hot or cold environment (below 0°C /32° F or above 40° C/104° F).
- If the appliance has ever been dropped, damaged, left outdoors, or dropped into water, can not work as its usual, please return it to the service center.
- The appliance is only to be used with the original power supply unit provided with the appliance.

About Cleaning

- 1) If large amount of cleaning liquid entering into the motor, it may cause damage to the appliance.
- 2) Do not use any acidic or alkaline liquid to the appliance.
- 3) If any chemical liquid into the eyes, immediately flush them with clean water.
- 4) Dirty water disposal should comply with local regulations.

Specifications

Product Name	Cordless Steam Wet & Dry Vacuum Cleaner
Model No.	Cordless Flomo S
Size of Main Unit	270*225*1160 mm
Charging Voltage	27V $\overline{\text{---}}$ 1.2A
Rated Power	450W
Working Mode	Steam mode, wet mopping mode, dry mopping mode
Battery Type	Rechargeable Li-ion
Battery Capacity	4000mAh 86.4Wh
Working Time	Normal mode $\geq$ 35min Steam mode $\geq$ 13min Max mode $\geq$ 28min
Charging Time	4-6H
Clean Water Tank Capacity	About 600 ml
Dirty Water Tank Capacity	About 800 ml


The data comes from the lab of Mamibot Manufacturing USA Inc. It may be slightly different with the users data due to different usage or working environment, please subject to the actual products. For continuous products improvement, we reserve the right to any technical and design change without prior notice.

Package Contents


Main Unit x 1 pcs	Handle x 1 pcs	Screw & Screw Driver x 1 set
Adapter x 1 pcs	Roller Brush x 1 pcs	Charging Base x 1 pcs
Hepa x 1 pcs	Cleaning Tool x 1pcs	User Manual x 1 pcs
Metal Strainer Spoon x 1 pcs		

PRODUCT OVERVIEW

Product Introduction

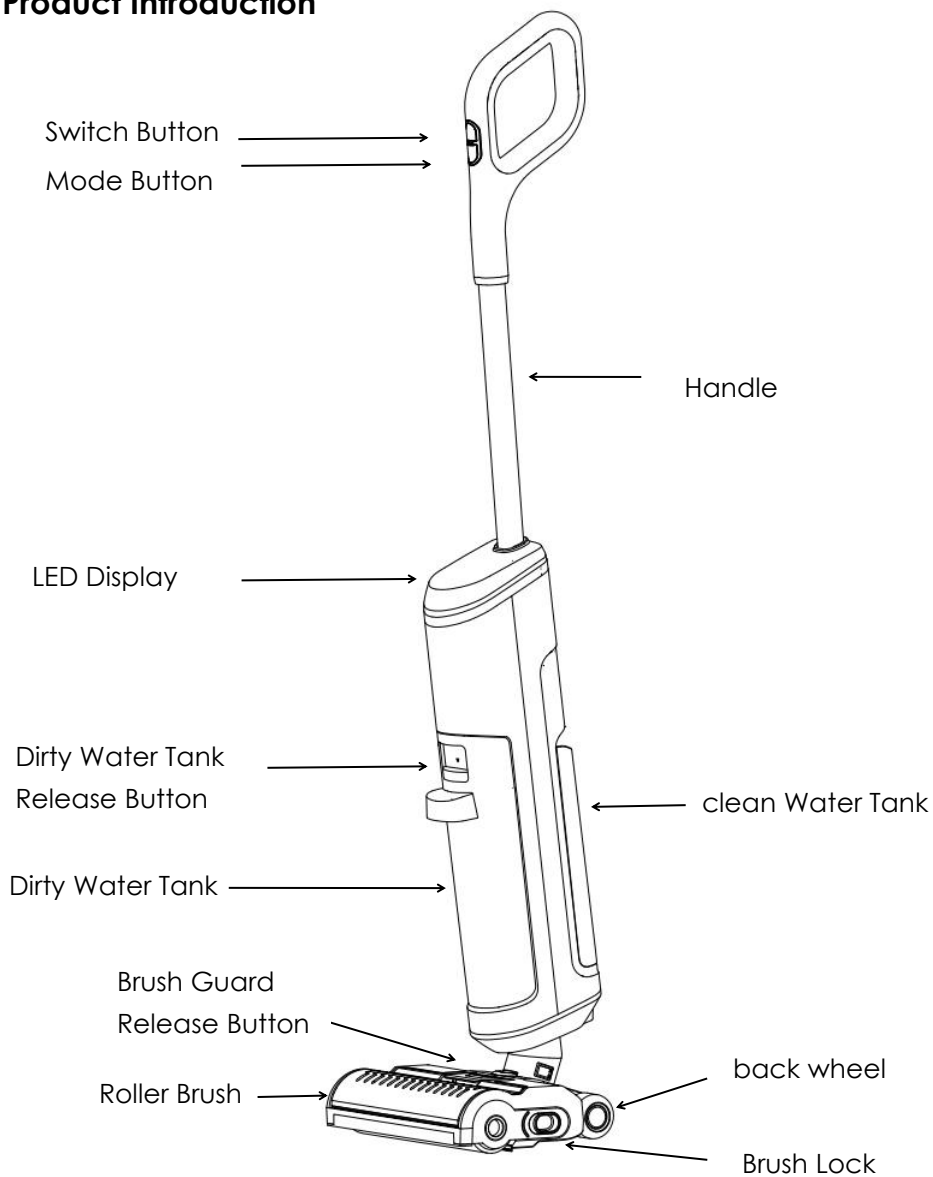


Charging Base

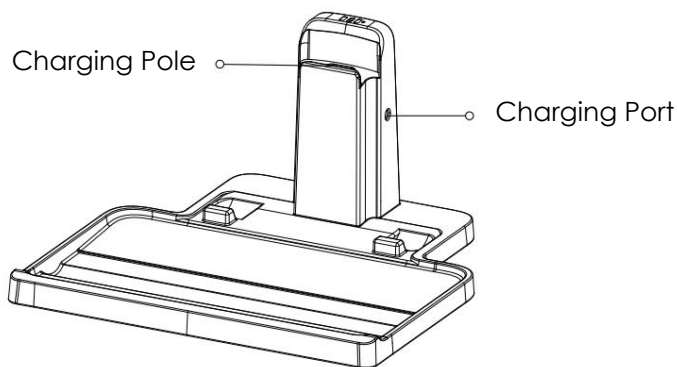

Display Screen



Handle Installation Instructions

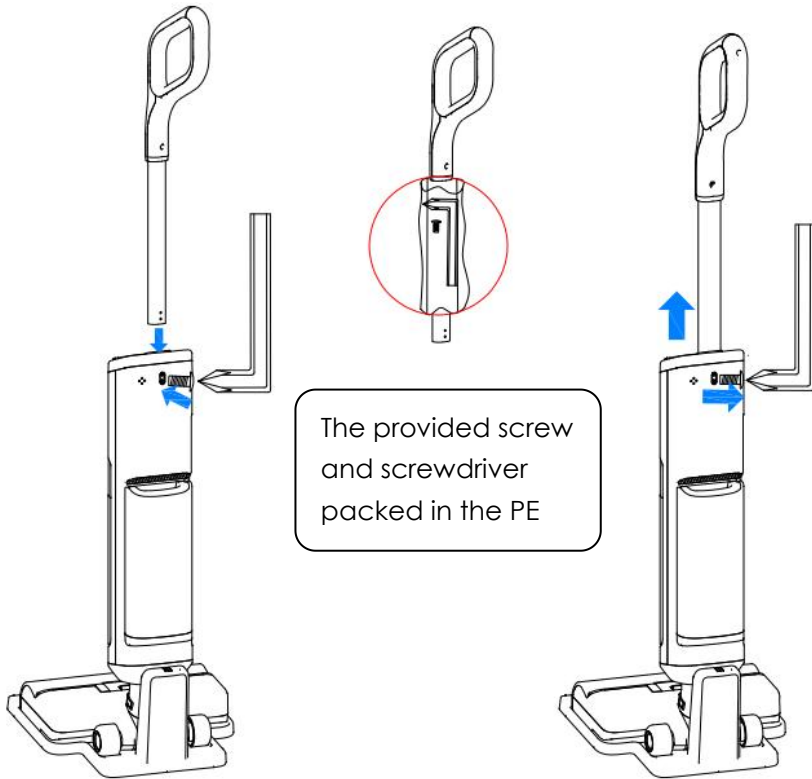

1. Insert the handle into the body of the appliance. Screw up the handle with a screwdriver. Ensure the handle is firm without any looseness.

2. If you want to unload the handle, please remove the screw on the back of the appliance, and pull the handle out.

Charging Instructions


Note: Please fully charge the appliance before using it for the first time.

Charging

1. Please place the appliance on the charging base close to the wall.
2. Plug the adapter into power socket and connect the wire end to the charging port on the appliance.
3. When the charging indicator on the display screen blinks, it means the appliance is charging.

Self Drying the Roller Brush (optional)

1. The self drying function will be automatically started once the system detected the appliance was been put back to the charging base.
 2. The heating temperature will not be more than 45°C and the drying time will not be longer than 12hrs. During the drying time, the roller brush will rotate once every 1.5hr.
 3. **WARM TIPS** : Before putting the unit on the charging base, please **firstly plug in the base**, then 12 hours later the device will stop heating to the roller brush.
- ※ Please note if firstly putting the unit on the charging base and then plug in the base, the heating function to the roller brush will be stopped once the unit was fully charged.

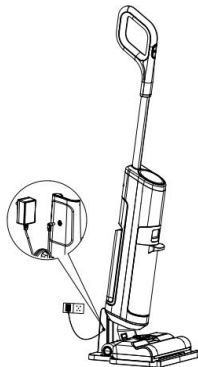


Note:

- Only the supplied adapter will be permitted to charge the appliance.
- The appliance must be charged once every 3 months if it will not be used for a long time. It takes 4-6 hours for each full charge.


Starting to Use

Note: Please charge the appliance before first time use. (refer to “Charging Instructions” for details).


Press the  button for 2 seconds to power the device on. Press the  button for 1 second, the appliance will start AUTO cleaning mode. Press it for 2 seconds again to power off the device.

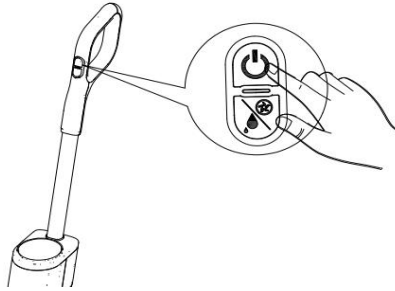**Cleaning mode:**

1. Press the switch button for 1 second to start the cleaning as a cycle: Wet Mode--Dry Mode--Steam Mode
2. Press mode button for 2 seconds, enter Strong Mode, press again to cancel.

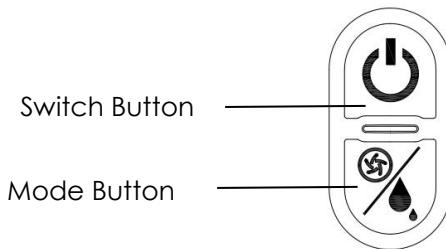

※ Do not recline the device more than 140° to avoid from water leakage.

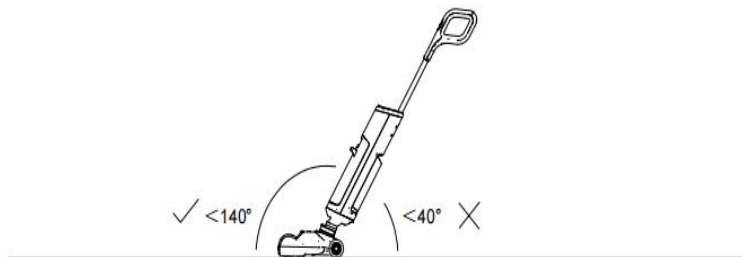


Place the device on the charging base vertically after use for recharge and storage.

One Touch Self-Cleaning



Only when the device is charging and the battery level is more than 10%, the self-cleaning can be started.

1. The device upright sit on the charging base and make sure the clean water tank is full.
2. Short press the  button on the handle, the self-cleaning indicator will be on, then the self-cleaning starts.
3. The device will continue to recharge after the self-cleaning is done. Please clean the dirty water tank in time.

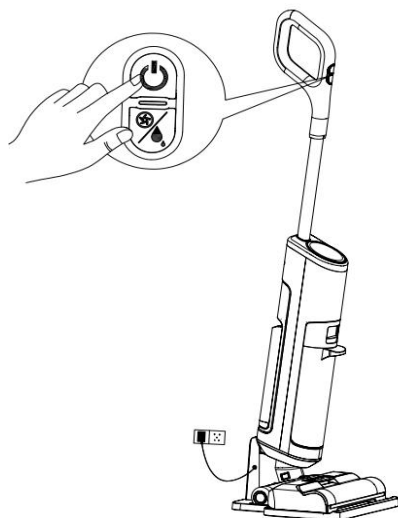

Filling Clean Water Tank

- ① Take out the clean water tank by pressing the water tank release button.

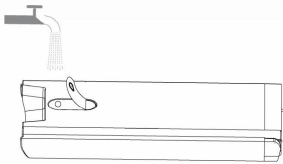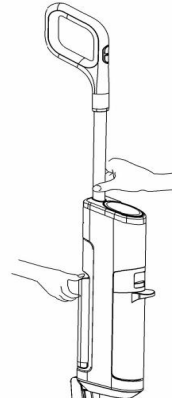

- ② Fill the clean water: Close the rubber lid firmly after adding water.

Note:

Only use water under 140F° /60C° .


DO NOT USE HOT WATER.

Don't beyond the water warning line.

- ③ Place the tank back to the device.
Please be sure the tank is well placed.


Note:

- Do not add dirty water into the clean water tank.
- Do not add corrosive or flammable liquids into the water tank.
- It is normal if there is some water in the water tank at the first use, tests and inspections are proceeded before goods leaving factory.

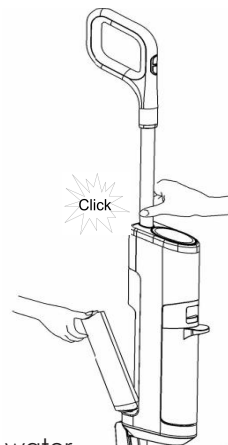



Clean the Dirty Water Tank

Note: It is suggested to empty the dirty water tank after each self-cleaning done.

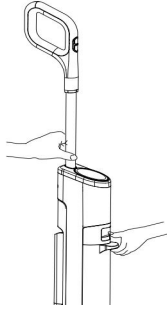


① Take the dirty water tank out by pressing dirty water tank release button.

② Hold the tank with one hand and pull up the lid with another hand to empty the dirty water.

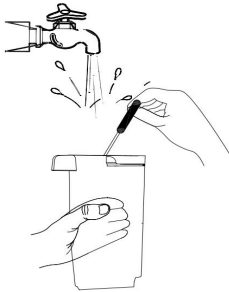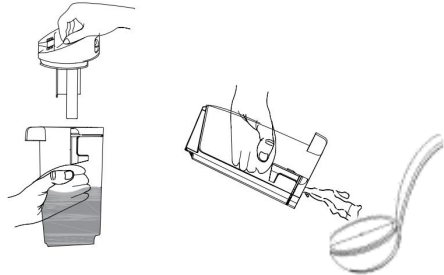

③ Flush the tank and its lid with clean water. Clean the inner wall of the tank with the provided cleaning tool.


④ After the cleaning done, put the water tank back. Please be sure the tank is well placed.

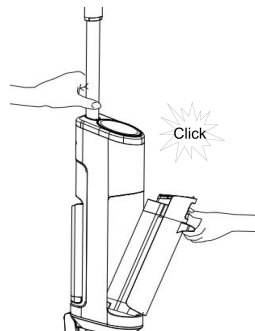

Clean the Filter


Note: It is suggested to clean the filter after each use.

Remove the filter from the top of the dirty water tank. Tap it slightly to drop off the dust on it, then flush it with clean water and cleaning tool, dry it after each use.

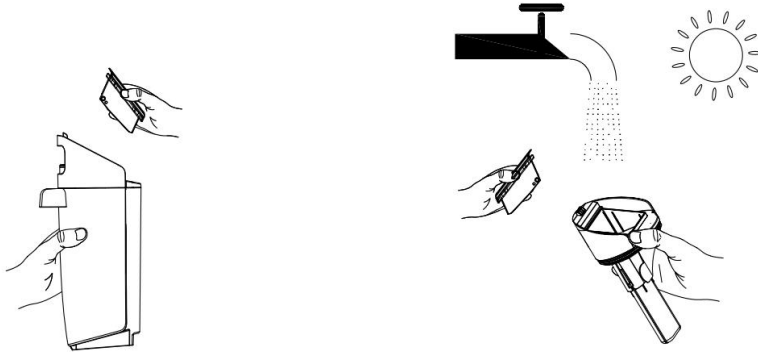



Cleaning the Brush Guard

1. Remove the brush guard by pressing the brush guard release button and wash it with clean water.
2. Please load it back correctly avoid from any leakage.

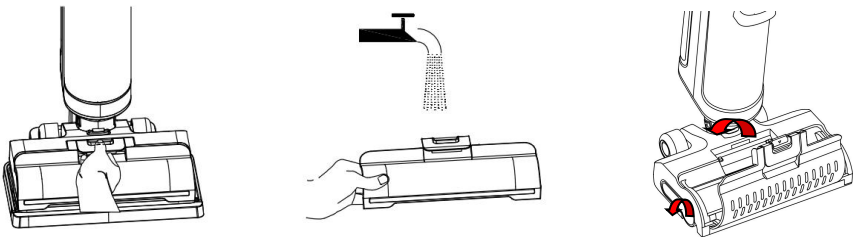

Cleaning the Roller Brush



① Hold and press the roller brush release button with your thumb and index fingers, the pull out the roller brush horizontally as picture instructs.

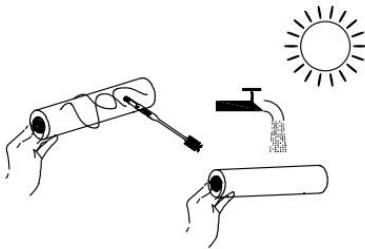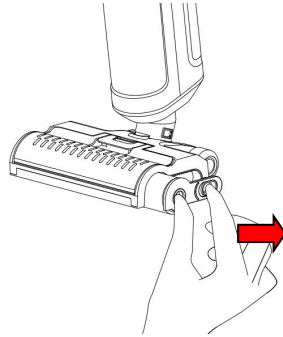

② Remove hair and debris on the roller brush with the cleaning tool, and wash it with clean water.

The roller brush must be completely dried before use.

③ Remove hair and dirties from the brush seat and suction port with a tissue or wet cloth.

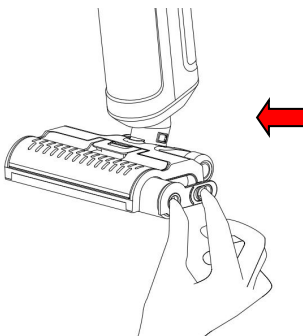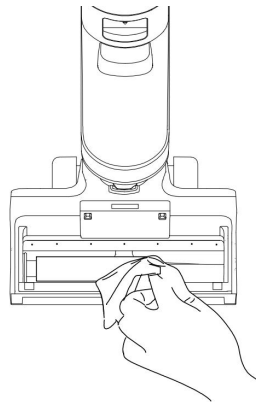

④ Push the roll brush back as picture shows after cleaning it.

Trouble shooting

If the appliance is not working properly, the display screen will show an error code. Please refer to the trouble shooting table to find the solution.

Error Code	Possible Cause	Solution
	Dirty water tank full	Empty the dirty water tank and clean the metal conductive pole.
	Clean water tank empty	1.Please add the clean water. 2.If still keep alarming, please remove the water tank and start the unit until the machine alarms again, and then put back the water tank.
E1	Roller brush is blocked	Please remove the blockage on the roller brush.
E2	Fan motor abnormal	Please contact customer service.
E3	Water pump abnormal	Please contact customer service.
E4	Charging abnormal	Please check if cleaner is plugged properly.
E5	Pump abnormal	Please check pump and contact service
E6	Heating abnormal	Please check if cleaner is plugged properly.
04	Low battery	Charge the device.

Fail to turn on the device	1.The handle may not be placed properly. 2.The battery is low.	1.Check whether the handle is firmly inserted and locked. 2.Charge the cleaner.
The vacuum is weakness than ever.	1. The Hepa is blocked or wet. 2. The pipeline is blocked.	1. Clean and dry the Hepa. 2. Clean the Pipeline.
Non-self-cleaning	Steam pipe blocked	Put the cleaner on the charging base and long press the mode button to flush the steam pipe.

Cleaning / Replacement Frequency Suggestions

Part	Suggestion
Clean water tank & dirty water tank	Clean after each use.
Hepa	Clean and dry after each use. Replace every 3-6 months.
Filter	Clean after each use
Roller Brush	Clean and dry after each use. Replace every 3-6 months.
Brush Guard	Clean after each use.
Suction Port	Clean after each use.
Metal Strainer Spoon	Clean after each use
Wheels	Clean every month.
Charging Station	Clean every 2-3 times use.

Note:

Above frequency is only for your reference. The final cleaning / replacement frequency should depend on the usage.

Warranty

- The cordless Flomo S has a 1 year limited warranty against original defects in workmanship or material.
 - The warranty only applies to the authorized distributors of Mamibot.
 - Improper usage or not in accordance with the user manual will void the warranty.
 - The application of force majeure will be invalid.
 - Normal reductions, such as battery aging, hepa aging are not guaranteed.
- ※ Please keep and provide your proof of purchase, S/N when make a claim.

Compliance Standards



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



The product has been manufactured according to the standard of: EMC Directive - 2014/30/EU, LVD - 2014/35/EU, RoHS 2.0 Directive (EU) 2015/863 and (EU) 2017/2102 amending Annex II to Directive 2011/65/EU.

We reserve the right to changes in text, design, and technical specifications which are subject to change without prior notice.

Manufacturer:

Mamibot Manufacturing (Shanghai) Co.,Ltd.

37B, No.1188, North Kaixuan Road, Shanghai, P.R.C

Supervisor:

Mamibot Manufacturing USA Inc.

One Commerce Center, 1201 Orange St, Wilmington, DE 19899 USA

Tel: 001 302-428-9888 sales@mamibot.com www.mamibot.com