 


Mamibot

Multifunctional Vacuum Cleaner

Sticar200

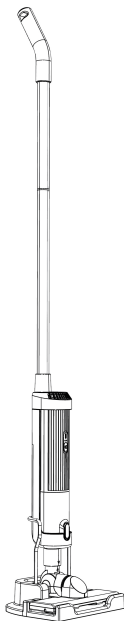

User Manual 202509 Ver.

The illustrations in this manual are for reference only, please subject to the actual product.

Table of Contents

Safety Instructions and Warnings	1-2
Overview	3-4
Package Content	5
Assembling	6
Specification	7
How to Use	8-10
Main Unit Cleaning	11
Storage	12
Troubleshooting	12
Warranty	13
Disposal & Compliance Standard	13

- Please don't use it close to fire source or in any location of high temperature.

Safety Instructions and Warnings

Read all instructions before use:

The appliance is not to be used by children. Persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge may only use this appliance if they are supervised or have been given instruction about how to use it safely and understand what risks are involved. Children should be supervised to ensure they do not play with the device.

Notice and Warnings:

- Please take it gently and carefully to avoid breaking the device.
- Please don't use it close to a fire source or in areas with high temperature.
- Don't use or keep the cleaner in extreme climate conditions, e.g. cooling rooms, high temperature environment, the suggested temperature for use and storage is 0-40°C (32-104°F) of indoor areas;
- Please make sure the filter set is installed properly.
- Do not use outdoors or on wet surfaces, use only on dry, indoor surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use vacuum if it has been dropped, damaged, left outdoors, or dropped in water. Return it to an authorized service center.
- Do not handle appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or got ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Look on your vacuum and follow all label and marking instructions.
- Keep end of hose, wands and other openings away from your face and body.
- Do not use the vacuum cleaner without dust box filter in place.
- Always unplug this appliance before connecting or disconnecting vacuum hose.
- Store the vacuum indoors. Put the vacuum away after to prevent tripping accidents.
- Do not use for any purpose other than described in this user's guide.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use the cleaner in or near flammable or explosive conditions.
- Don't use your cleaner to suck glass particles, needles, water, ashes, or any other liquids.
- Don't use your cleaner to suck cement, land plaster, wall plaster or toys, which may cause damage to the device.
- Don't block the exhaust air outlet.
- If the cleaner can't start working even when the battery is full, please go to service agent or Mamibot distributors for inspection, don't disassemble it on your own.
- Don't use the cleaner if dust box and filter set are not in position.
- Dry cloth is suggested to clean the cleaner, no gas/alcohol or other chemical solution is allowed to clean the device.
- Turn off the cleaner first before proceeding with any cleaning task or maintenance.


- Please clean the dust box, suction inlet and tube in time to avoid air channel being blocked, air channel blockage would reduce suction power and cause motor heating.
- Hepa filter is suggested to be replaced in three month, or even in a shorter period if the device is frequently used.


Application of Charging Cable and Battery

- Use only the original charging cable supplied with this device.
 - Please use the proper electric outlet and make sure no heavy objects are placed on the charging cable.
 - Allow adequate ventilation around the charging cable when using it to operate the device. Do not cover the charging cable with objects that will reduce cooling.
 - Do not use the charging cable in a high moisture environment. Never handle the charging cable with wet hands.
 - Connect the charging cable to a proper power source. The input must be 5V DC, 2A.
 - Do not use broken charging cable. The charging cable must be removed from the receptacle before cleaning or maintaining the appliance. Do not unplug the charging cable by pulling on the cable.
 - Do not attempt to service the charging cable. There are no service parts inside. Replace the whole unit if it is damaged or exposed to high moisture. Consult your Mamibot dealer for help and maintenance.
-
- The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contact, heat above 40 °C (104 °F), or incinerate.
 - Please charge your cleaner at least every three months if you are not using it regularly.
 - Fully charge the cleaner before use if it's not used for a long time.
 - If you have to dispose of this old equipment, please take it to the local recycling center for recycling electrical and electronic parts.
 - Retain the safety and operating instructions for future reference.
 - Do not expose your device to rain or excess humidity, and keep it away from liquids (such as beverages, faucets, and so on).
 - Avoid exposing your device to direct sunlight or intense light source, and keep it away from heat source (such as radiators, space heaters, stoves, and so on).
 - The appliance must be disconnected from the receptacle before removing the battery for disposal of the appliance.
 - The battery must be used in accordance with the directions in this Instruction manual.
 - Product manufacturer cannot be held liable or responsible for any damages or injuries caused by improper use.

Overview

Full Set

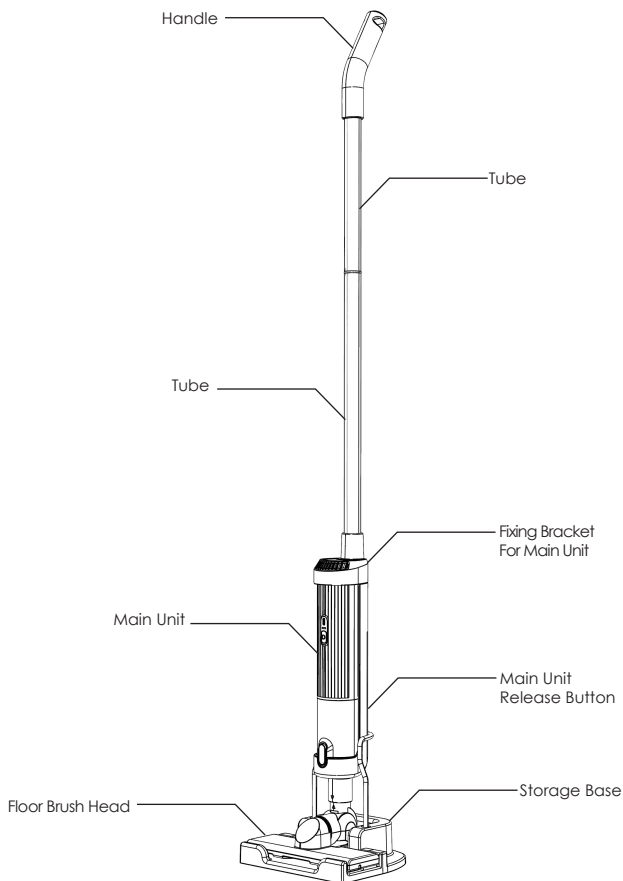

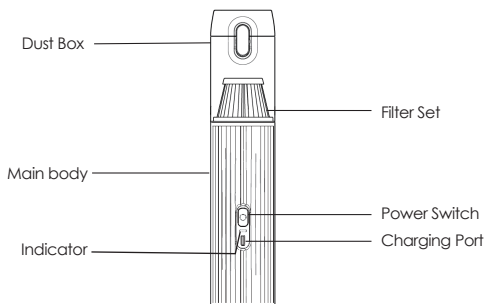

Main Unit

Package Content



Handle x1



Tube x1



 
Fixing Bracket x1




Main unit x1




Wide Brush x1



2-in-1 Brush x1

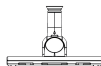

Floor Brush Head x1

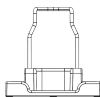

Storage Base x1



Long Blow
Mouthpiece x1



Short Blow
Mouthpiece x1



Extraction Nozzle ×1



Extraction Nozzle
Cover ×1



U Type-C
Charging Cable x1



User Manual x1

* The packing contents and pictures may be slightly different from the final product, please subject to the actual product or confirm with the seller.

Assembling

1.Storage Base (Fig.1)

- 1). Hold the metal frame, align both ends of the frame with the mounting holes on the base, and insert the frame until it stops.
- 2). Place the storage racks on the base tightly.

2. Main Unit (Fig.2)

- 1). Hold and press the main unit release button, pull the fixing bracket top upwards, then place the main unit into the bracket, push the bracket top downwards to the end.
- 2). Following the above to remove the main unit.

3. Stick Vacuum Cleaner (Fig.3)

- 1). Hold the handle, insert it into the tube accordingly
- 2). Insert the tube into the main unit fixing bracket until you hear the "click".
- 3). Install the floor brush head on the fixing bracket.

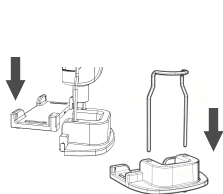


Fig.1

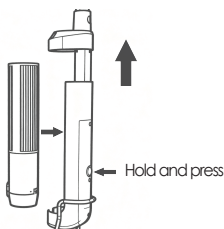


Fig.2

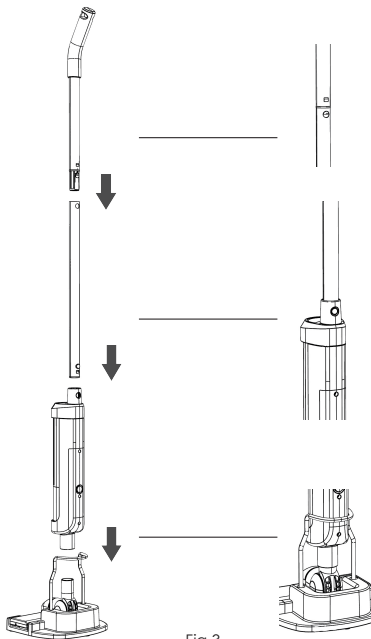


Fig.3

Specification

Product Model	Sticar 200
Size of Main Unit	φ55 x 255 mm
Net Weight	1.24 KG
Input	5V = 2A
Rated Power	100W
Battery Type	Li-ion Battery
Battery Capacity	2000mAh
Rated Battery Voltage	11.1V =
Working Noise	≤80 dB
Dust Box Capacity	About 0.12 L
Working Time	< 20 mins
Charging Time	About 3-4 hours
Working Mode	Standard / Strong Mode
1. The data comes from the lab of Mamibot Manufacturing USA Inc. It may be slightly different with the users data due to different usage or working environment, please subject to the actual products. 2. The noise was tested in an indoor anechoic chamber environment at a distance of 1 meter from the noise source. 3. For continuous products improvement, we reserve the right to any technical and design change without prior notice.	

How to Use?

▲ Important Notice: The suction nozzle can not be used for the tire, balloon, basketball, football and other high pressure in flation.



1.Charging

- 1.Ensure the product is switched off.
- 2.Insert the Type-C charging cable into the cleaner charging port, insert USB end into the appropriate plug.
- 3.The charging indicator will be blue breath light when charging; The cleaner is fully charged when the indicator gets off after it keeps solid blue for 3 minutes.

Notes: if the indicator is red breaching ligh when charging, cool the cleaner first naturally, then recharge it.

2.Use the Cleaner

1).Make sure the filter is properly assembled and the cleaner is fully charged.

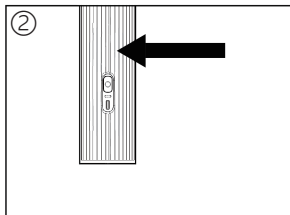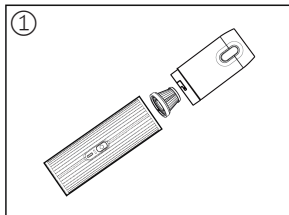

2).Switch on & Working Mode:

(1).Hold and press the switch button for 2 seconds to switch on or off the cleaner.


(2). Turn on the cleaner to enter the standard mode by default.

Press the switch button again to enter strong mode.


Press the switch button for the third time to power it off.

3).Application Scenario


The cleaner can be attached with different nozzles or brushes, it can vacuum or blow.

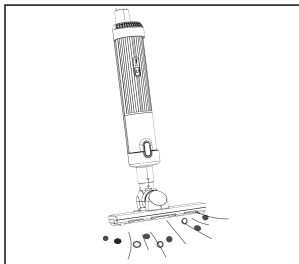


It can vacuum the dusts or short hair on the ground.

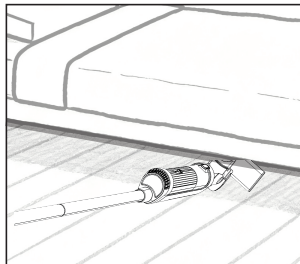


It can reach under the bed or sofa easily.

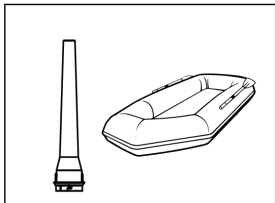


Long blow mouthpiece is suitable for inflating and pumping swimming pools and kayaks, and also can be used as a blower for air blowing, keyboard gap blower.

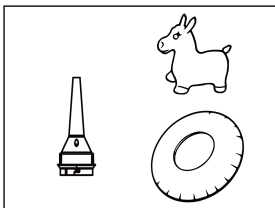


For inflating and pumping swimming rings and yoga balls.

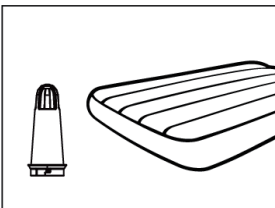


For inflating and pumping air beds and air mattresses with Extraction Nozzle.

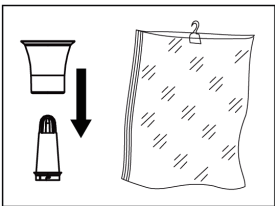

For pumping household vacuum storage bags with Extraction Nozzle Cover

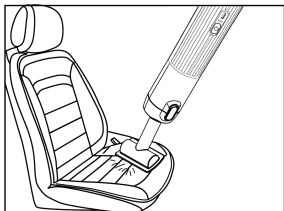

The wide brush can be used for cleaning vehicle mat, sofa, bed, desk, etc.

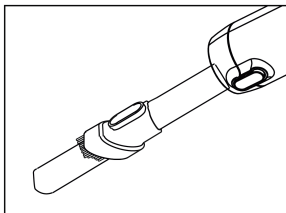

2 in 1 brush can be used in special areas, such as corners, sofa crevice, etc.

4).Vacuums & Blows

(1).Rotate the dust box counterclockwise to remove the dust box.


(2). Place the Long blow mouthpiece, Short blow mouthpiece, Extraction nozzle on the main unit to use:

Left: Blowing outlet
Right: Vacuuming inlet


Blows



Vacuums

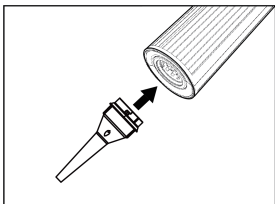


Place the short blow mouthpiece on the vacuuming inlet for pumping.

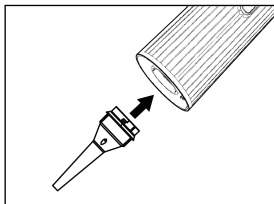


Place the short blow mouthpiece on the blowing outlet for inflation.


Main Unit Cleaning

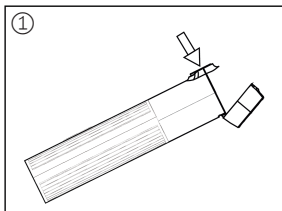


Hold and press the dust box release button to open the dust box lid.

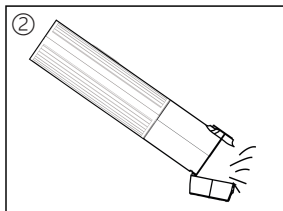


Pour out the debris into the trash can.

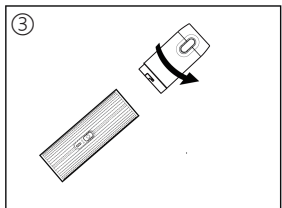


Rotate the dust box counterclockwise to remove the dust box.

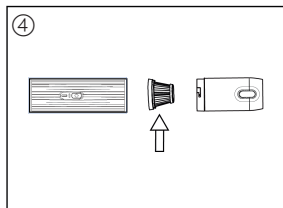

Remove the Hepa filter from the dust box.

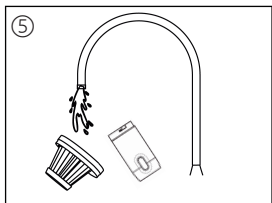


Clean the dust box and Hepa with soft brush and cool water.

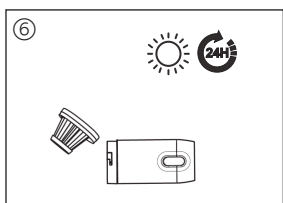

Dry the dust box and Hepa filter completely before next use.

Storage

1. Assemble the cleaner properly before storage, then place it on the base station properly.
2. The storage temperature must be 0-40 °C (32-104°F).
3. Charge the cleaner regularly (approx. every 3 months) if you do not use it for a long time.
4. Store the cleaner in a cool, dry place away from direct sunlight.

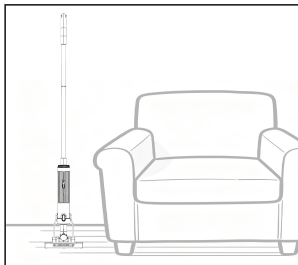

Troubleshooting

If there is any failure of Sticar200, please follow solutions below to check and solve the problems. If none of the solutions is workable, please contact the authorized agent for inspection and further solutions.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Machine does not work.	The battery power is low.	Check the battery power and recharge it.
The machine can not suck ash or suction is very weak.	• The dust box may be full. • Lack of battery power. • The filter set is blocked. • Non-dried filters after cleaning. • Air channel is blocked.	• Empty dust box. • Charge the cleaner. • Clean the filter set. • Dry the filters after cleaning. • Check the air channel and take out the blocked debris.
Dust escaping from vacuum.	• Dust box is full. • The filter set may not be installed.	• Empty dust box. • Check to see if the filter set is installed properly.
Short running time.	• Aged battery pack. • Non-fully charged battery pack. • Over heated or over cooled battery pack.	• Replace the battery pack. • Recharge the battery pack. • Cool down and restart.
No indicator when charging.	• Adapter/Type-C charging cable is not plugged in properly. • Adapter/Type-C charging cable is not original.	• Check the charging connection, make sure it is assembled properly. • Use the original adapter/Type-C charging cable.
Flashing red when charging.	Overheated battery pack.	Cooling the cleaner then recharge.

Product Warranty

- The Sticar200 has a 1-year limited warranty against original defects in workmanship or material.
- The warranty only applies to the authorized distributors of Mamibot.
- Improper usage or not in accordance with the user manual will void the warranty.
- The application of force majeure will be invalid.
- Normal reductions, such as battery aging, filters aging, brushes aging are not guaranteed.
- Please keep and provide your purchase invoice when making a claim.

Disposal & Compliance Standards



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



The product has been tested and found to be compliance of the Council Directive 2014/30/EU, 2014/35/EU, and the council RoHS 2.0 Directive (EU) 2015/863/EU.

We reserve the right to changes in text, design, and technical specifications which are subject to change without prior notice.

Manufacturer:

Mamibot Manufacturing (Shanghai) Co.,Ltd.
3rd Floor, Room G2, No.28, Tanjiadu Road, Putuo Distric, Shanghai, P.R.C

Supervised by

Mamibot Manufacturing USA Inc.
One Commerce Center, 1201 Orange St, Wilmington, DE 19899 USA
Tel: 001 302-428-9888 sales@mamibot.com www.mamibot.com

